


Aqua Lava Smart Bidet Toilet by Aqua-Sigma

User Operating Guide




1400W: Wall Hung Model

Overview:

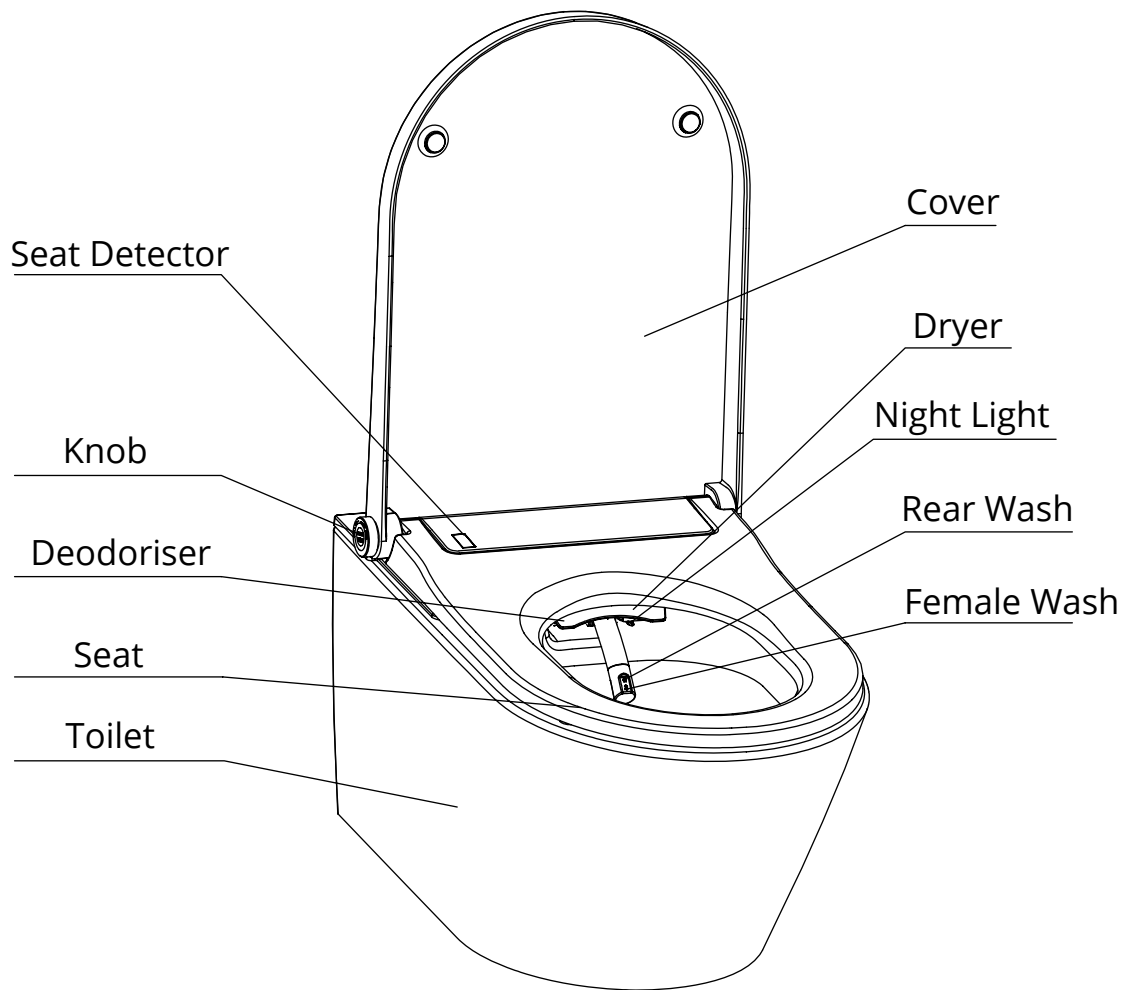


Remote Control:

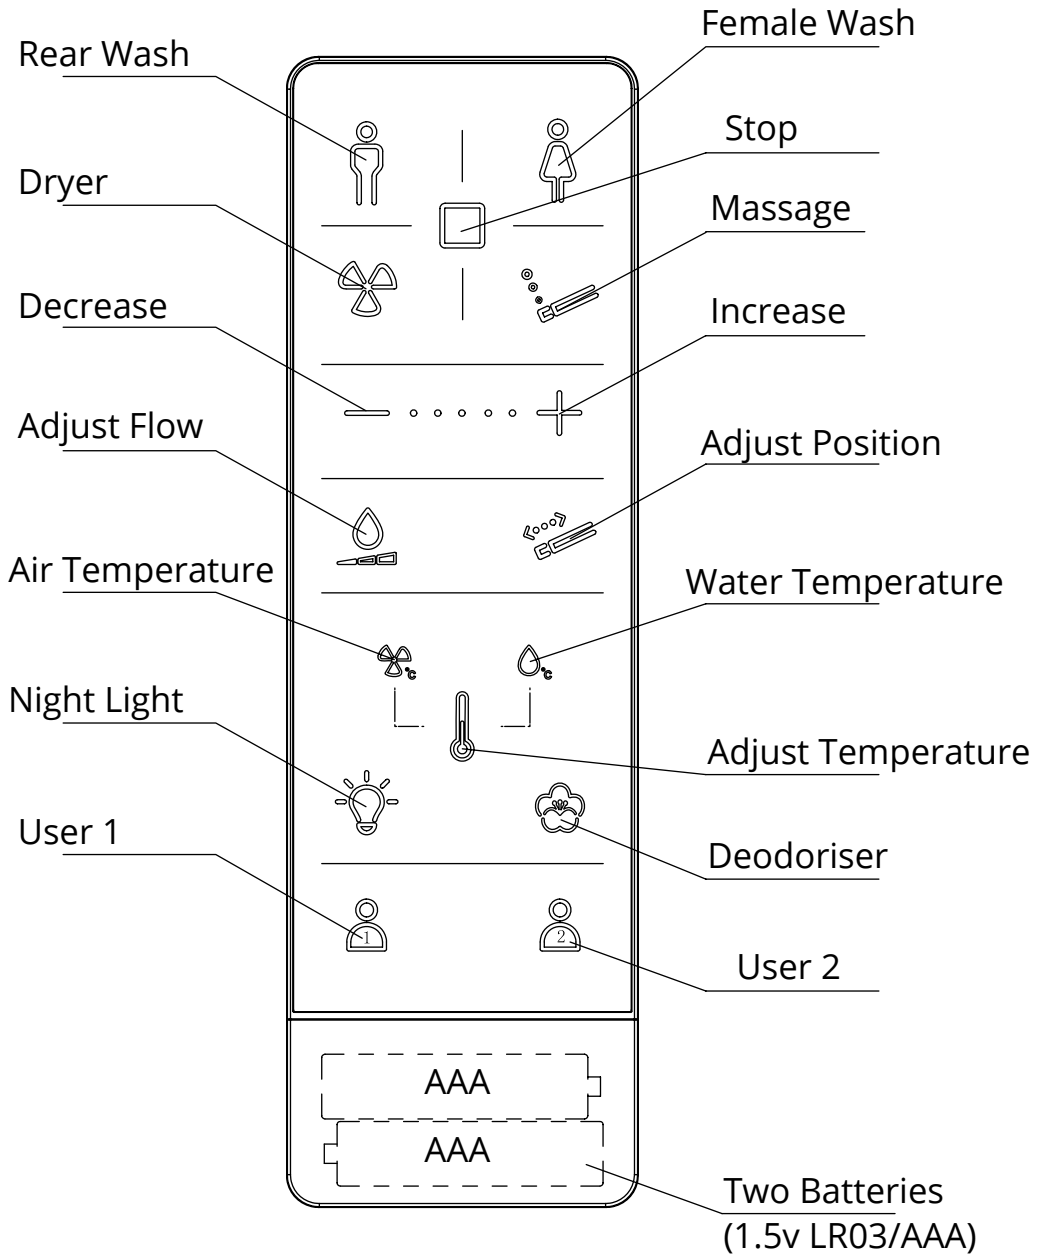


Rear Wash/Female Wash:

- Be seated
- Press the “Wash” button on the remote control, then it will start to wash.
- It will stop after 3 minutes. You can stop washing before this by pressing the “Stop” button.

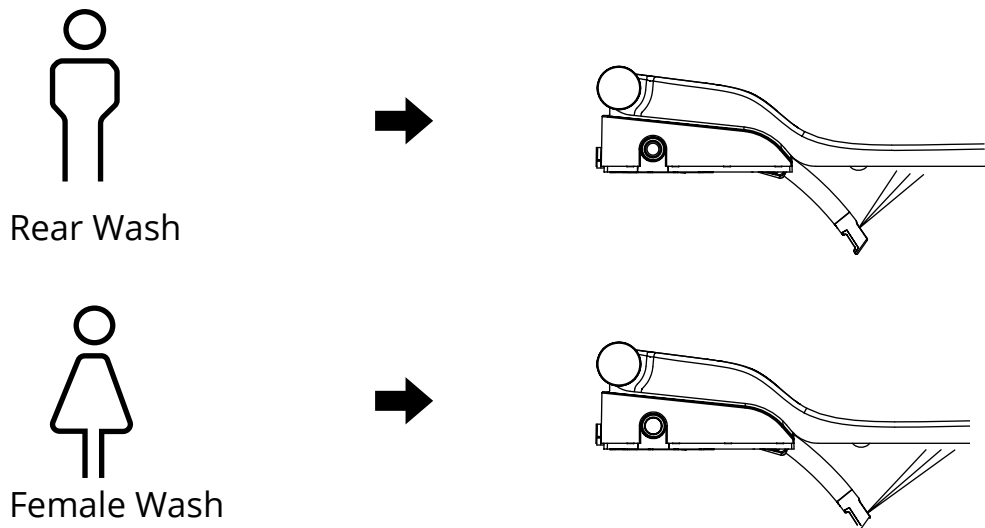

OR

You can operate by rotating the knob. Rotate the knob in the clockwise direction to activate “Female wash” and the anticlockwise direction for “Rear wash”. It will stop after 3 minutes and start to dry. You can stop washing before this by pressing the “Stop” button.

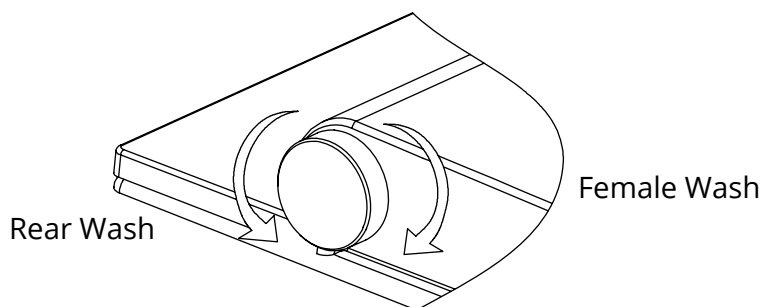

Note:

While in rear wash or female wash, it will wash at the fixed position for about 10 seconds, and movable wash for about 18 seconds, then return to the fixed position until to the end.


Dry operation

- Be seated.
- Press the “Dry” button on the remote control, then it will start to dry.
- It will stop after 3 minutes.




OR

- Be seated.
- Ensure it is not in the process of rear or female washing.
- Press the knob, then it will start to dry. It will stop drying after 3 minutes.

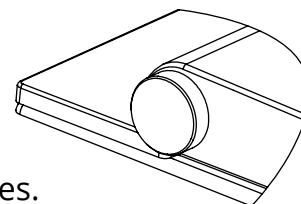

Massage operation

- In the process of rear or female washing, repeatedly press the “Massage” button on the remote control until you choose your desired spray mode.

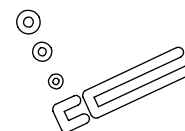

- ◦ + Oscillating: When one indicator light is on
- ◦ ◦ + Pulsating: When two indicator lights are on
- ◦ ◦ ◦ + Oscillating and Pulsating: When three indicator lights are on


Stop operation

- In the process of rear washing, female washing or drying, press the “Stop” button on the remote control and it will stop washing or drying.



OR


- Press the knob to stop washing or drying.

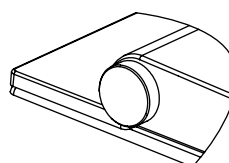


Adjusting water flow rate

- In the process of rear or female washing.

- Press the "Adjust flow" button on the remote control, then press the "Decrease" or "Increase" button to adjust the flow rate.

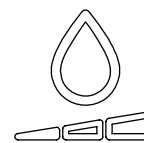

- You can operate by rotating the knob. The flow rate will increase in the clockwise direction and decrease in the anticlockwise direction.

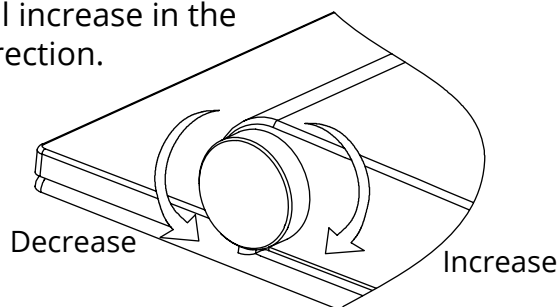


Adjusting the nozzle position

- Default 5th.

- In the process of rear or female washing.

- Press the "Adjust Position" button on the remote control, then press the "Decrease" or "Increase" button to adjust the nozzle position forward or backward.


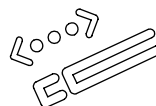


Adjusting the water temperature

- In the process of rear or female washing.


- Repeatedly press the "Adjust temperature" button on the remote control until the water temperature icon is lighted.

 - Press the "Increase" or "Decrease" button to adjust water temperature.

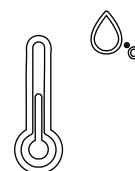


OR

- Keep pressing the knob and rotate it. The water temperature will increase in the clockwise direction and decrease in the anticlockwise direction.

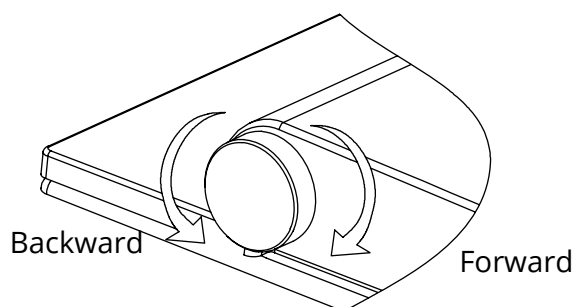


Adjusting the air temperature:

- In the process of drying.
- Repeatedly press the “Adjust temperature” button on the remote control until the air temperature icon is lighted, then press the “Increase” or “Decrease” button to adjust air temperature.

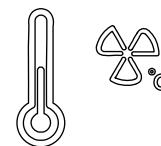


OR

- You can operate by rotating the knob. The air temperature will increase in the clockwise direction and decrease in the anticlockwise direction.

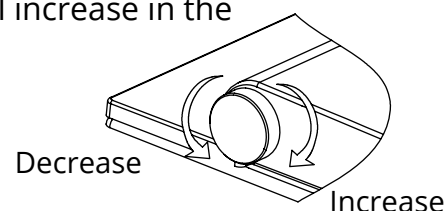

Light Setting

- Always on mode for the night light by default.
- Repeatedly press the “Night light” button on the remote control to choose the different mode.

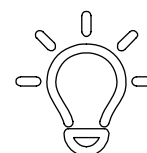

- ◦ + Close mode: when one indicator light is on
- ◦ ◦ + Always on mode: when two indicator lights are on
- ◦ ◦ ◦ + Smart mode: when three indicator lights are on

OR

- Open the cover and seat then rotate the knob in the anticlockwise direction. The night light will be on the different mode just as “close”, “always on”, “smart”.

NOTE: The “smart” mode refers to the night light that will light up in a dark environment and light off in a bright environment.

Deodorize Setting

- Smart mode for the deodorization by default. It is on when the user sits down and it will be off after one minute when the user leaves.
- If there is no operation of washing or drying whilst seated, it will be off after 15 minutes. Repeatedly press the “Deodorization” button on the remote control to open or close the deodorization.



- ◦ + Close mode: when one indicator light is on
- ◦ ◦ + Smart mode: when two indicator lights are on

OR

- Open the cover and be seated, without washing and drying, then always press the knob and rotate it in the clockwise or anticlockwise direction. The deodorization will be on or off.

User Setting


- Save the user setting.
- After adjusting the settings of water flow rate, temperature and nozzle position, keep pressing the "User 1" or "User 2" button on the remote control for more than 3 seconds to save the settings to "User 1" or "User 2".



- Retrieve the user settings. Before washing or drying press the "User 1" or "User 2" button on the remote control, then operate washing or drying. The flow rate, water temperature, nozzle position, and air temperature will be the same as saved.

Power Standby Setting

- In the state without seating.
- Keep pressing the knob for more than 6 seconds, it will go into power standby mode.
- Press the knob again for more than 6 seconds to restart it.

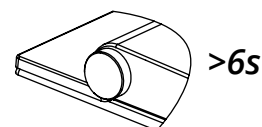



Sound Setting

- The sound is on by default. There is a beep when the bidet has received commands or signals.
- Open the cover and seat.
- Keep pressing the knob then rotate it. The sound is on in the clockwise direction and off in the anticlockwise direction.

General care and cleaning recommendations:

Cleaning Interval	Cleaning Activity
Daily	Remove water drops with a soft, lint-free cloth to avoid limescale stains.
Weekly	Clean all surfaces and corners. Clean the spray nozzle if required. See "Nozzle cleaning".
Monthly	Clean the WC ceramic appliance with a low acidic cleaning agent.
6 monthly	Replace the filter if required. See "Replacing the filter".

Cleaning agents and tools:

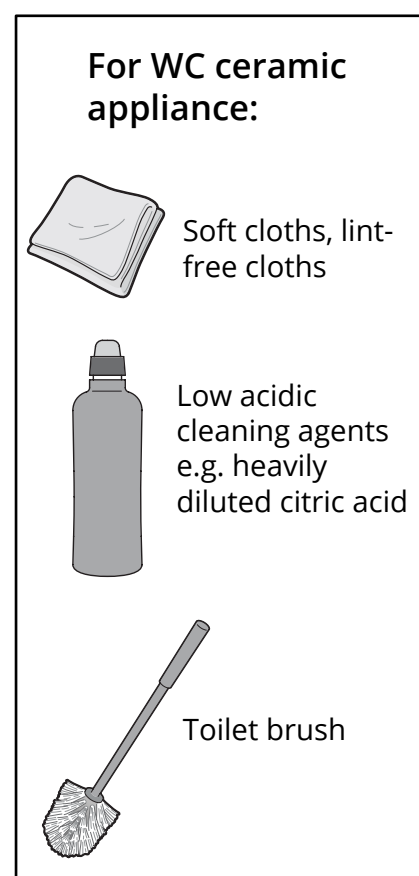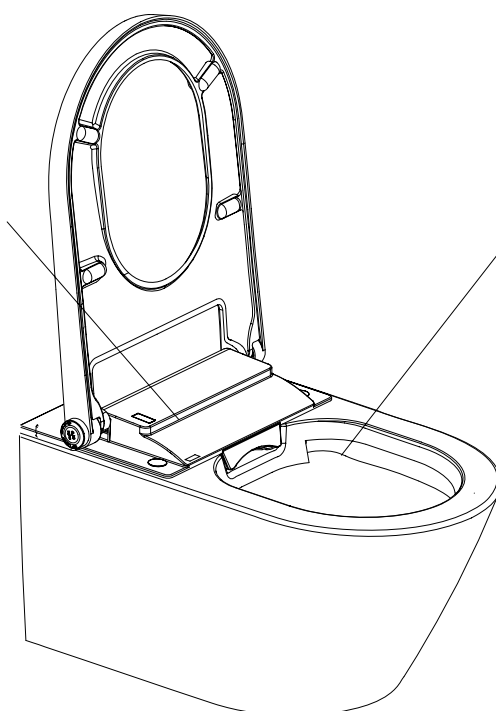






Do not use the cleaning agents of strong acid and alkali.
 To clean the E-bidet, do not use the hard brush e.g. toilet brush nylon brush.
 To clean the WC ceramic appliance, do not use a metal brush.

Self clean the tank:


If not used for more than 72 hours, when the user operates the washing, it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning.

Nozzle Cleaning


- The nozzle will be cleaned before washing and after washing.
- Open the cover and seat then rotate the knob in the clockwise direction.
- Then the nozzle will extend with cleaning water. It will return after 5 minutes or press the "Stop" button.

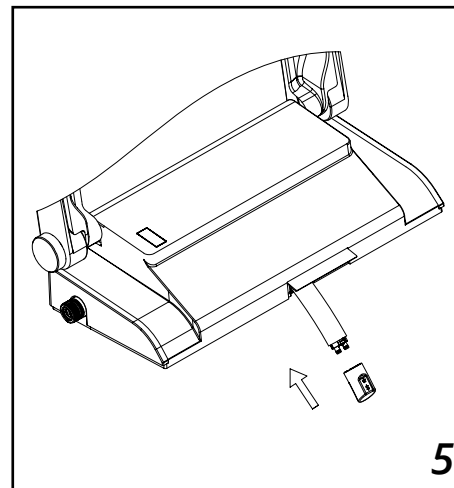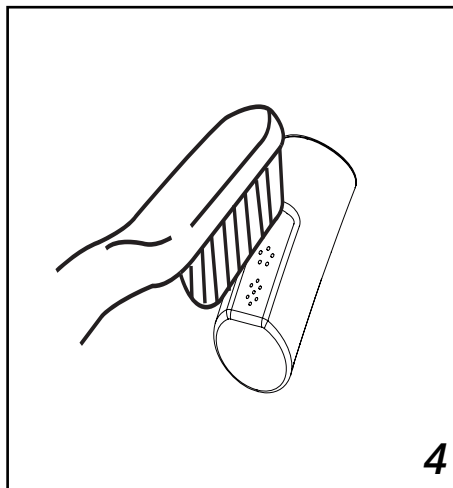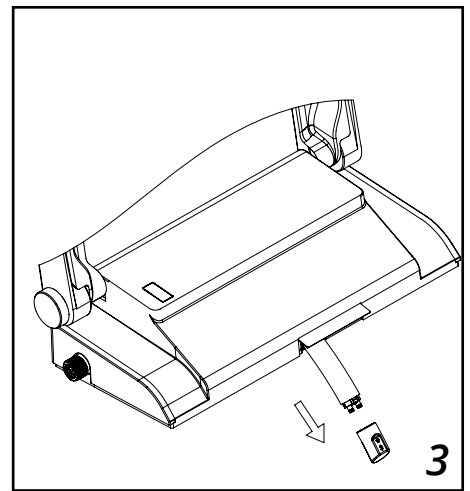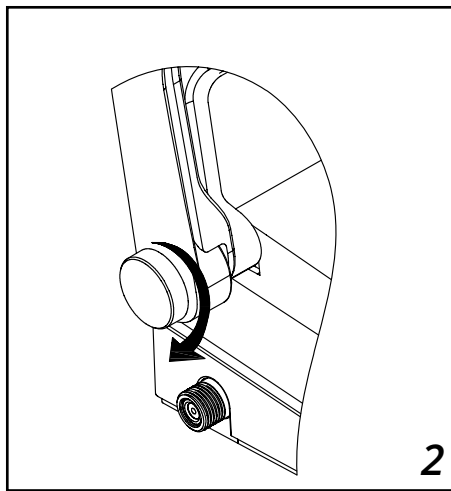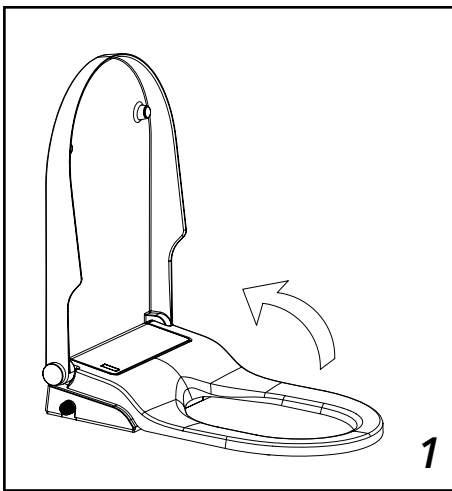

Drain the water tank

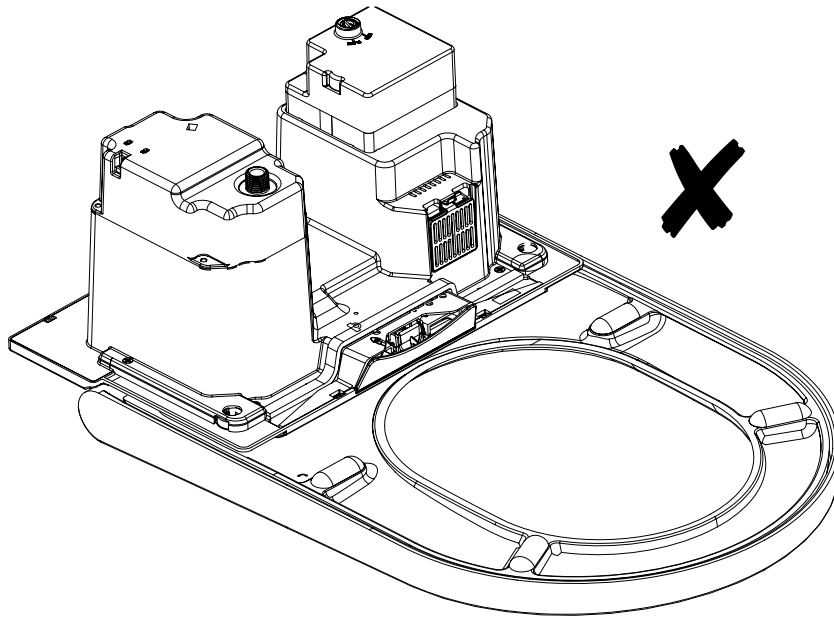

- The water and power must be cut before you disassemble the E-Bidet.
- Do not invert or tilt it before you finish draining the water tank.

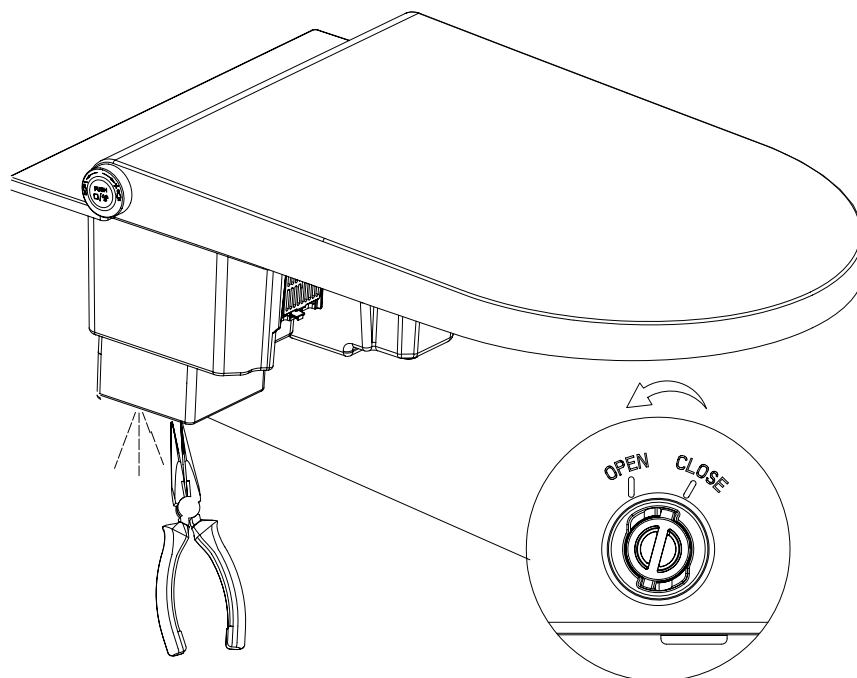


- Hold the plug with the tipper, turn to "open", and pull out. It will start to drain.
- After completing the drainage, insert the plug and turn to "CLOSE".

To install several electronic bidets in the same area, if you want each remote control to control the specified electronic bidet, complete the settings as per the following steps:

- Open both the cover and seat and without seating. Set the night light to the "close" model (See the "Light setting").


- Press the "stop" button and "adjust temperature" button on the remote control at the same time, and keep pressing for a few seconds, then hear the beep from the product. Meanwhile the indicator lights of "-", "+" buttons are on.

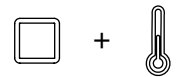


- Release the "stop" button, but keep pressing the "adjust temperature" button.



- Press the "USER1" and "USER2" in order, and then release the "adjust temperature" button. At this time, the lighted indicator is the current ID code of product.

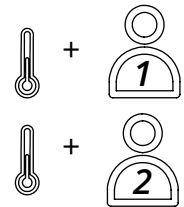


- By pressing "-", "+" buttons to switch different product ID code with corresponding indicator lights up. There are 10 ID codes in total. It is on the first code by default and the light of "-" lights up.

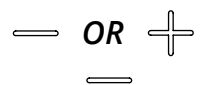

Replacing the batteries

- The remote control requires 2 batteries (type 1.5V LR3/AAA).
- When the user lights flash continuously, please replace the batteries in time.

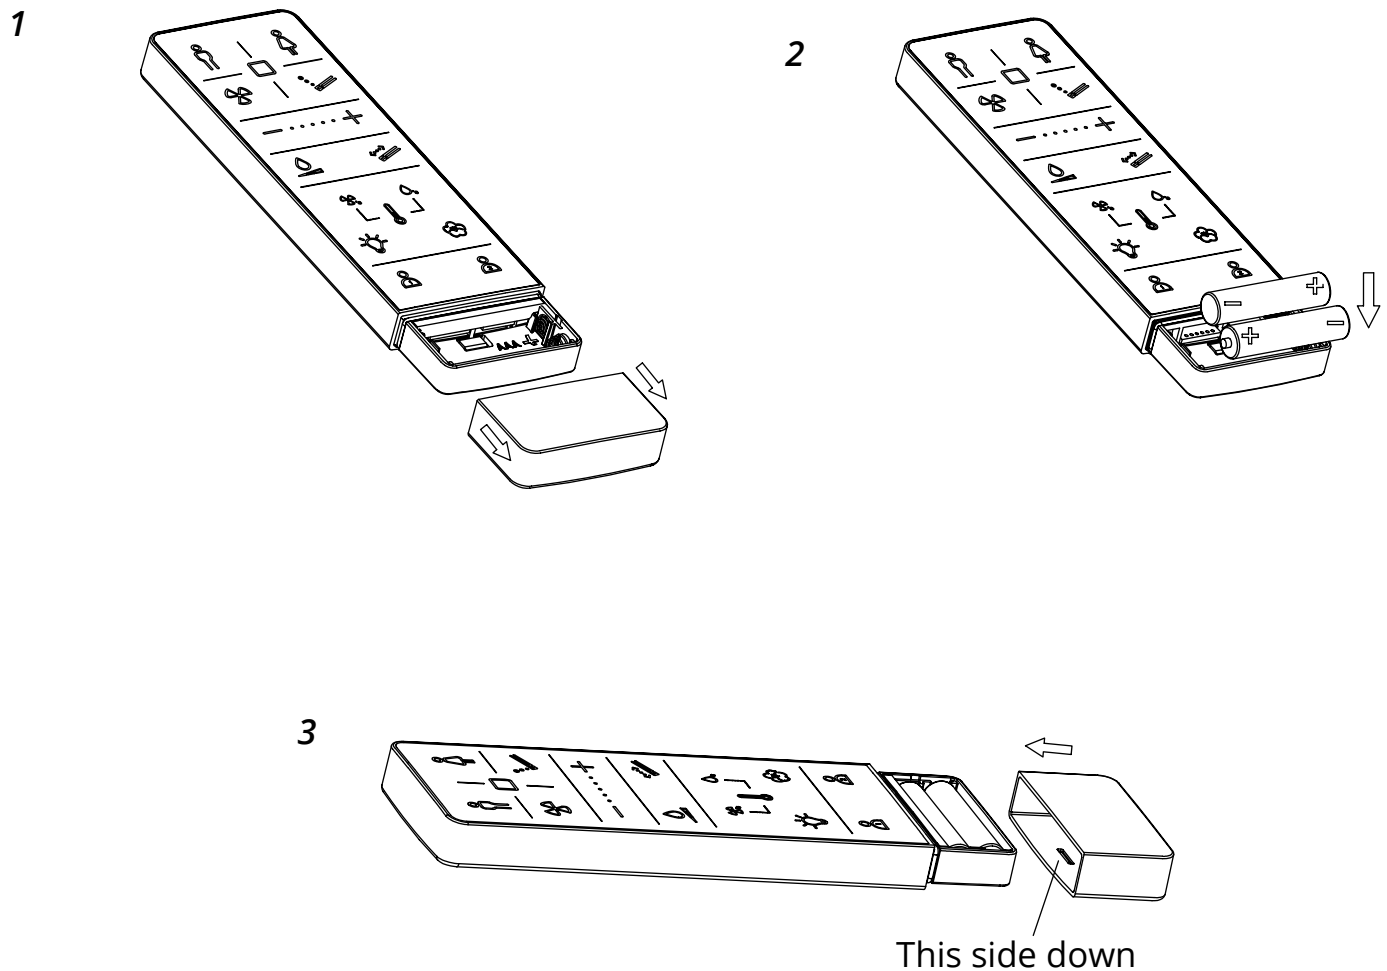

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the appliance before being charged.
- Different types of batteries, or new and used batteries, are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- The exhausted batteries are to be removed from the appliance and safely.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- The supply terminals are not to be short-circuited.

Troubleshooting

Problem	Potential cause	Suggested action
The washing can not work	The power supply may not be on	Please turn on the power
	The water supply may not be open	Please open the inlet water valve, or check if there is a water outage
	The filter may be blocked	Please replace a new filter. It has a service life of approx. half a year
	Not in the seating state	Please sit on the seat and adjust sitting position
	The cover is closed	Please open the cover and sit on the seat
	It has not been used for more than 72 hours	Not used for more than 72 hours, when the user operates the washing, it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
The nozzle goes back suddenly	The washing cycle is 3 mins. The nozzle will stop spraying after 3 mins, and then go back.	This is normal and please re-press the "wash" button to start washing again
	There may be some problems of water supply	Please check if there is a water outage
	The seated sensor detects the user left the seat	Please adjust sitting position
	The cover is closing	Do not put down the cover when it is washing
Low water flow rate	The water flow rate may be set at low grades	Please increase the flow rate as per "adjusting water flow rate" of operating instructions
	The water supply pressure may be too low	Please check and ensure the water supply pressure is 0.07Mpa
	The filter may be blocked	Please replace a new filter. It has a service life of approx. half a year
	The nozzle may be blocked	Please replace a new nozzle
Low water temperature	The water temperature may be set at low grades	Please set the water temperature at high grade as per "adjusting temperature" of operating instructions
	The temperature of water supply is too low	Please set the water temperature at high grade as per "adjusting temperature" of operating instructions, or decrease the flow rate as per "adjusting water flow rate"
The nozzle comes out slowly	When starting the wash function, the nozzle will be self-cleaning before coming out	This is normal
The water flows out but the nozzle do not come out	When start washing function, the nozzle will be self-cleaning before coming out.	This is normal
	It is not used for more than 72 hours	This is normal. Not used for more than 72 hours, when the user operates the washing it will open the self-cleaning for about 3 minutes
The dryer can not work	The power supply may not be opened	Please turn on the power
	Not in the seating state	Please sit on the seat and adjust sitting position
	The cover is closed	Please open the cover and sit on the seat
	It is not used for more than 72 hours	Not used for more than 72 hours, when the user operates the washing, it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
Low air temperature	The air temperature may be set at low grades	Please set the air temperature at high grade as per "adjusting temperature" of operating instructions
	The air heater cannot work normally	Please contact local distributor
Night light is always off	Maybe in the bright environment.	When the night light is set at smart mode, the night light will not work when in the bright environment.
	The night light function may be closed.	Please open the night light function and adjust the night light mode as per "Light Setting" of operating instructions
Night light is always on	In a dark environment.	When the night light is set at smart mode, the night light will be always on when in the dark environment
	Something may be covered around the knob.	Recover the obstructions around the knob
	The night light may be set at always on mode	Please adjust the night light mode as per "Light Setting" of operating instructions
The nozzle goes back automatically when manual cleaning	1.The nozzle goes back after washing 5 minutes.	This is normal
	Press the "stop" button	The manual cleaning will be stopped if press the knob or press the "Stop" button on the remote control.
	The seated sensor detects that the seat is closing	Please do not put down the seat during the manual cleaning
The remote control is not functioning	There are not batteries in the remote control	Please install the correct batteries in the remote control
	The battery power is too low	When the battery power is too low the LED of grade will flash. Please replace the battery
	The code of the bidet and remote control is not the same	Please set the code of the remote control to the correct one. See "One-On-One Setting"
There are BEEP sounds when the bidet is working	There is a short BEEP when you are sitting down, and a long BEEP when you leave. Also a short BEEP when the bidet has received commands.	This is normal. You can turn off the sound. See "Sound Setting"
The bidet cannot work normally	There is something abnormal	Please shut off the power and turn on after one minute. If the bidet still cannot work, please contact local distributor
The light around the knob flash twice with constantly BEEP	The water supply temperature may be too high	Please shut off the power and water supply, stop using the product, and then contact local distributor
The light around the knob keep flashing	There may be something wrong with the product	Please check if the electric power and water supply are normal, cut off the power and restart the product. If the bidet still cannot work, please contact local distributor