




Uspa ::::

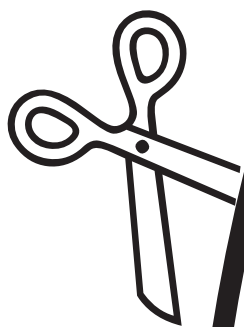


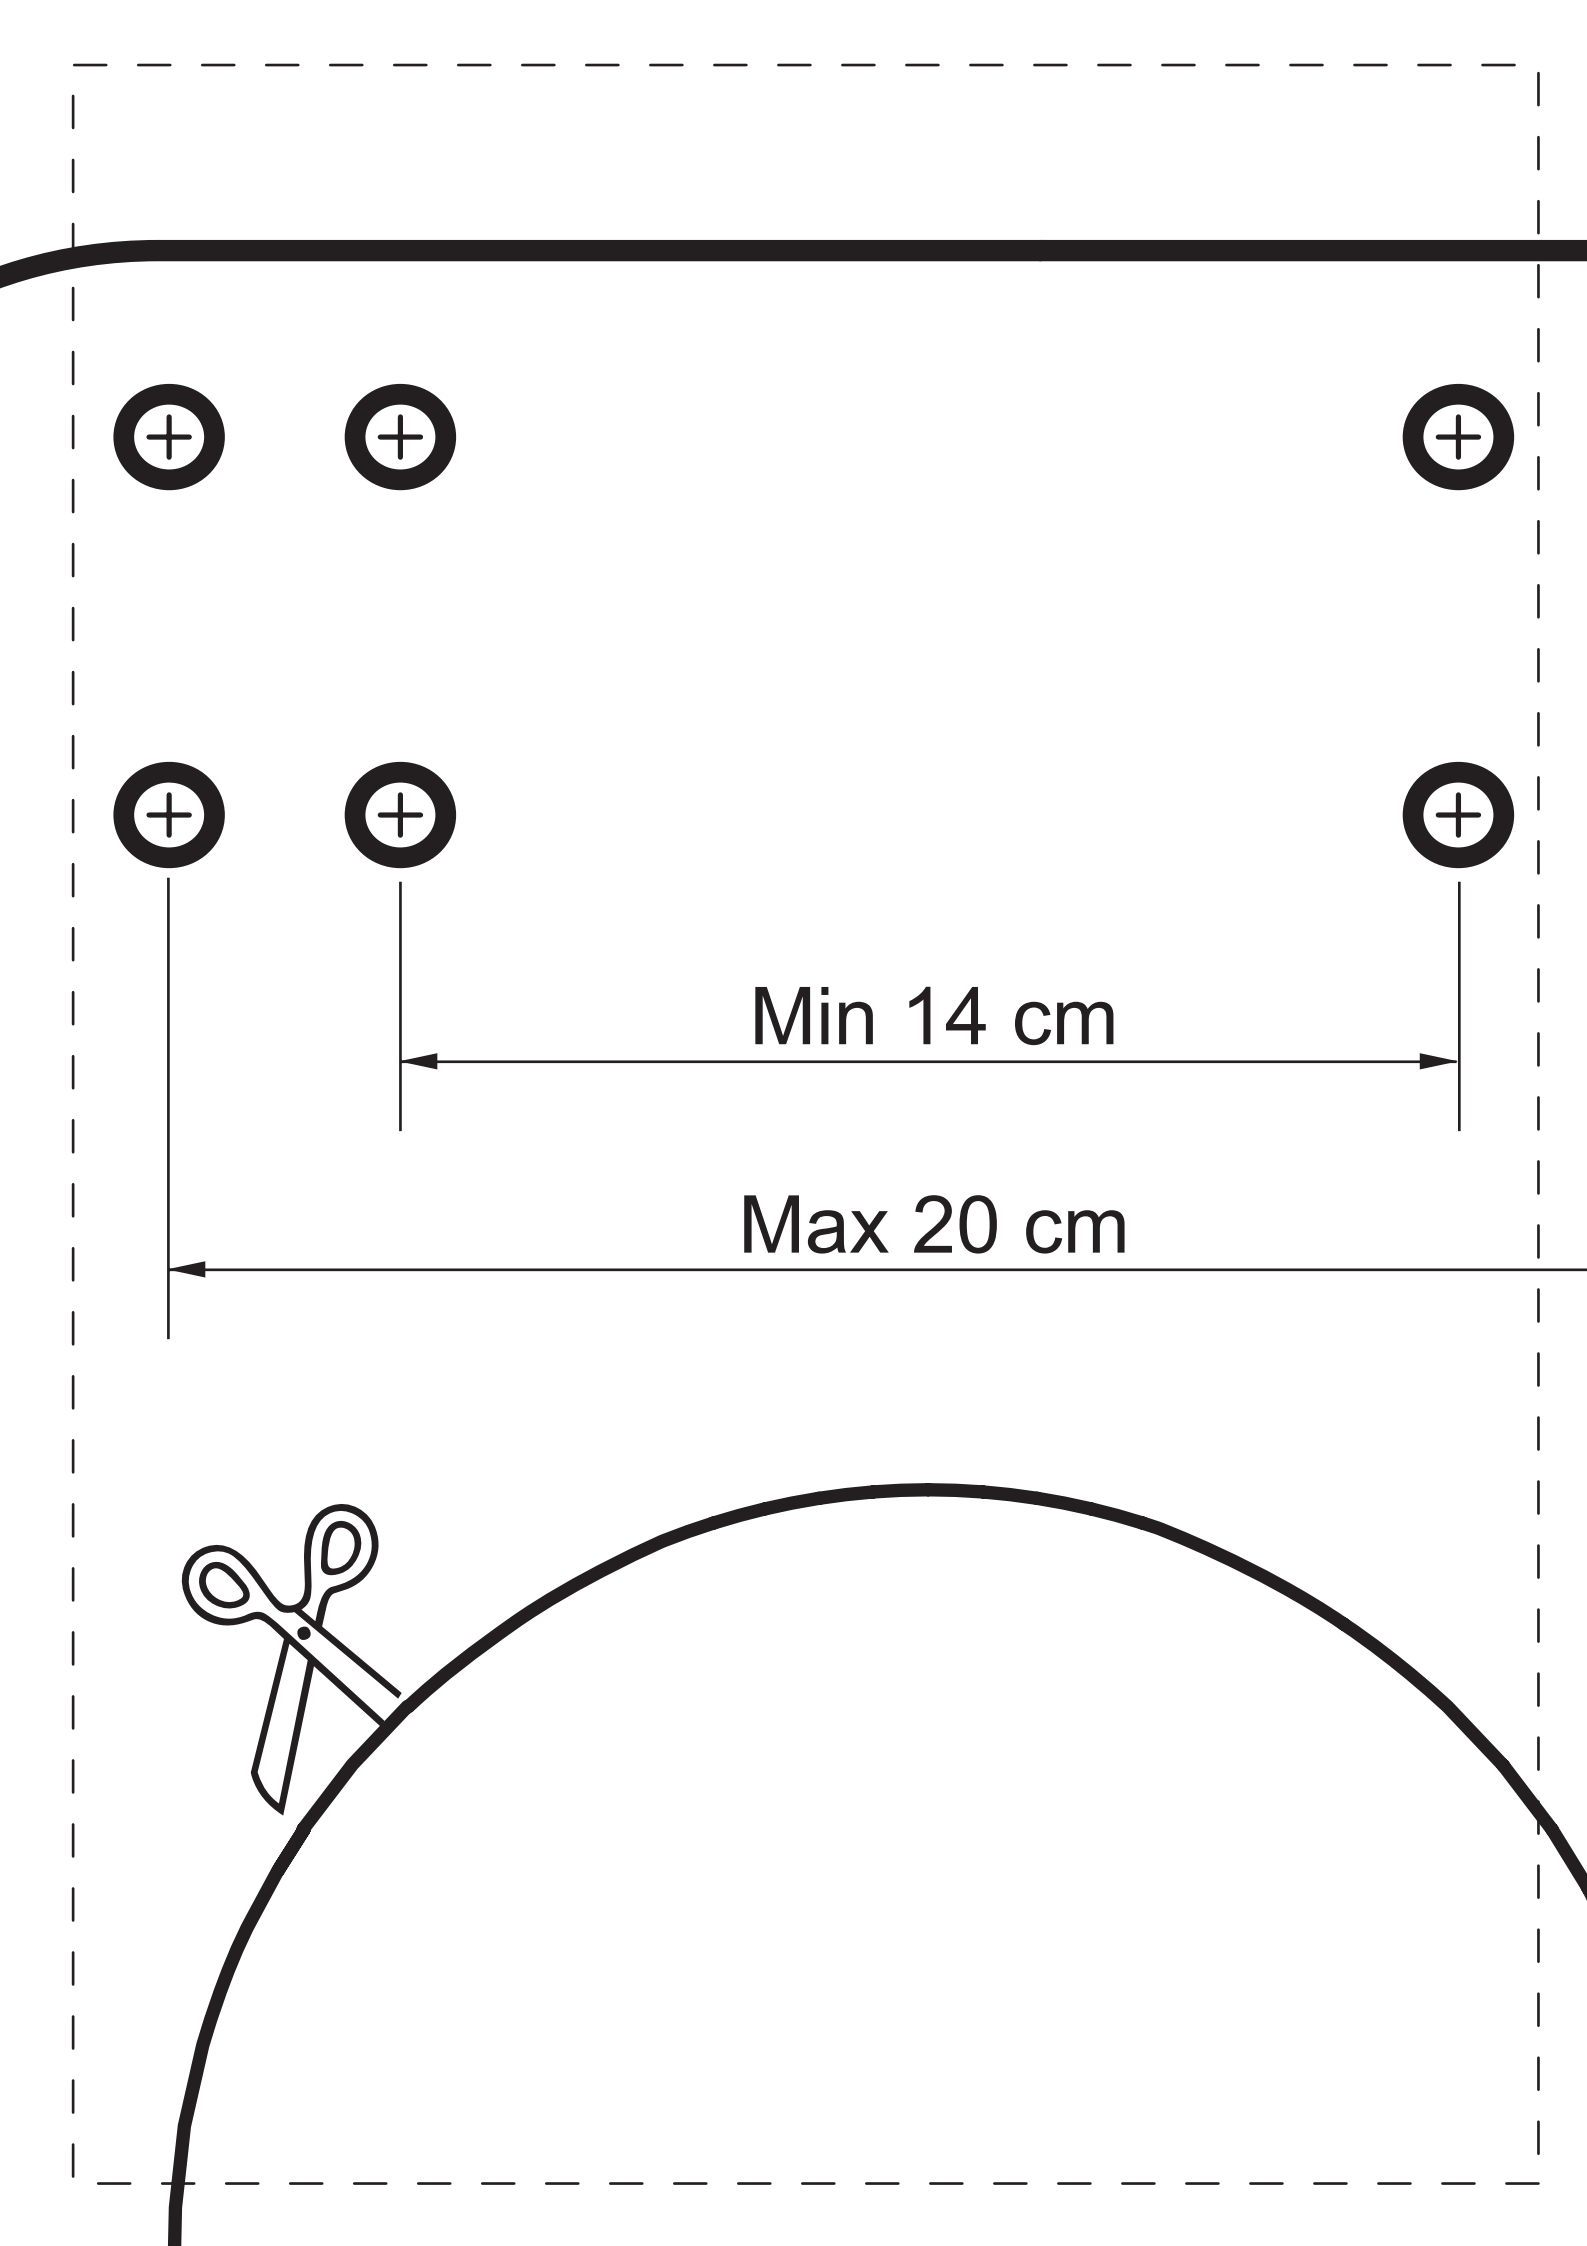



Min 14 cm



Max 20 cm

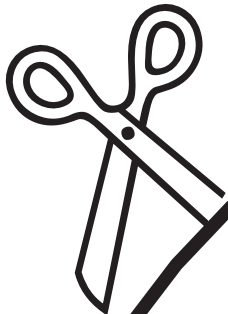

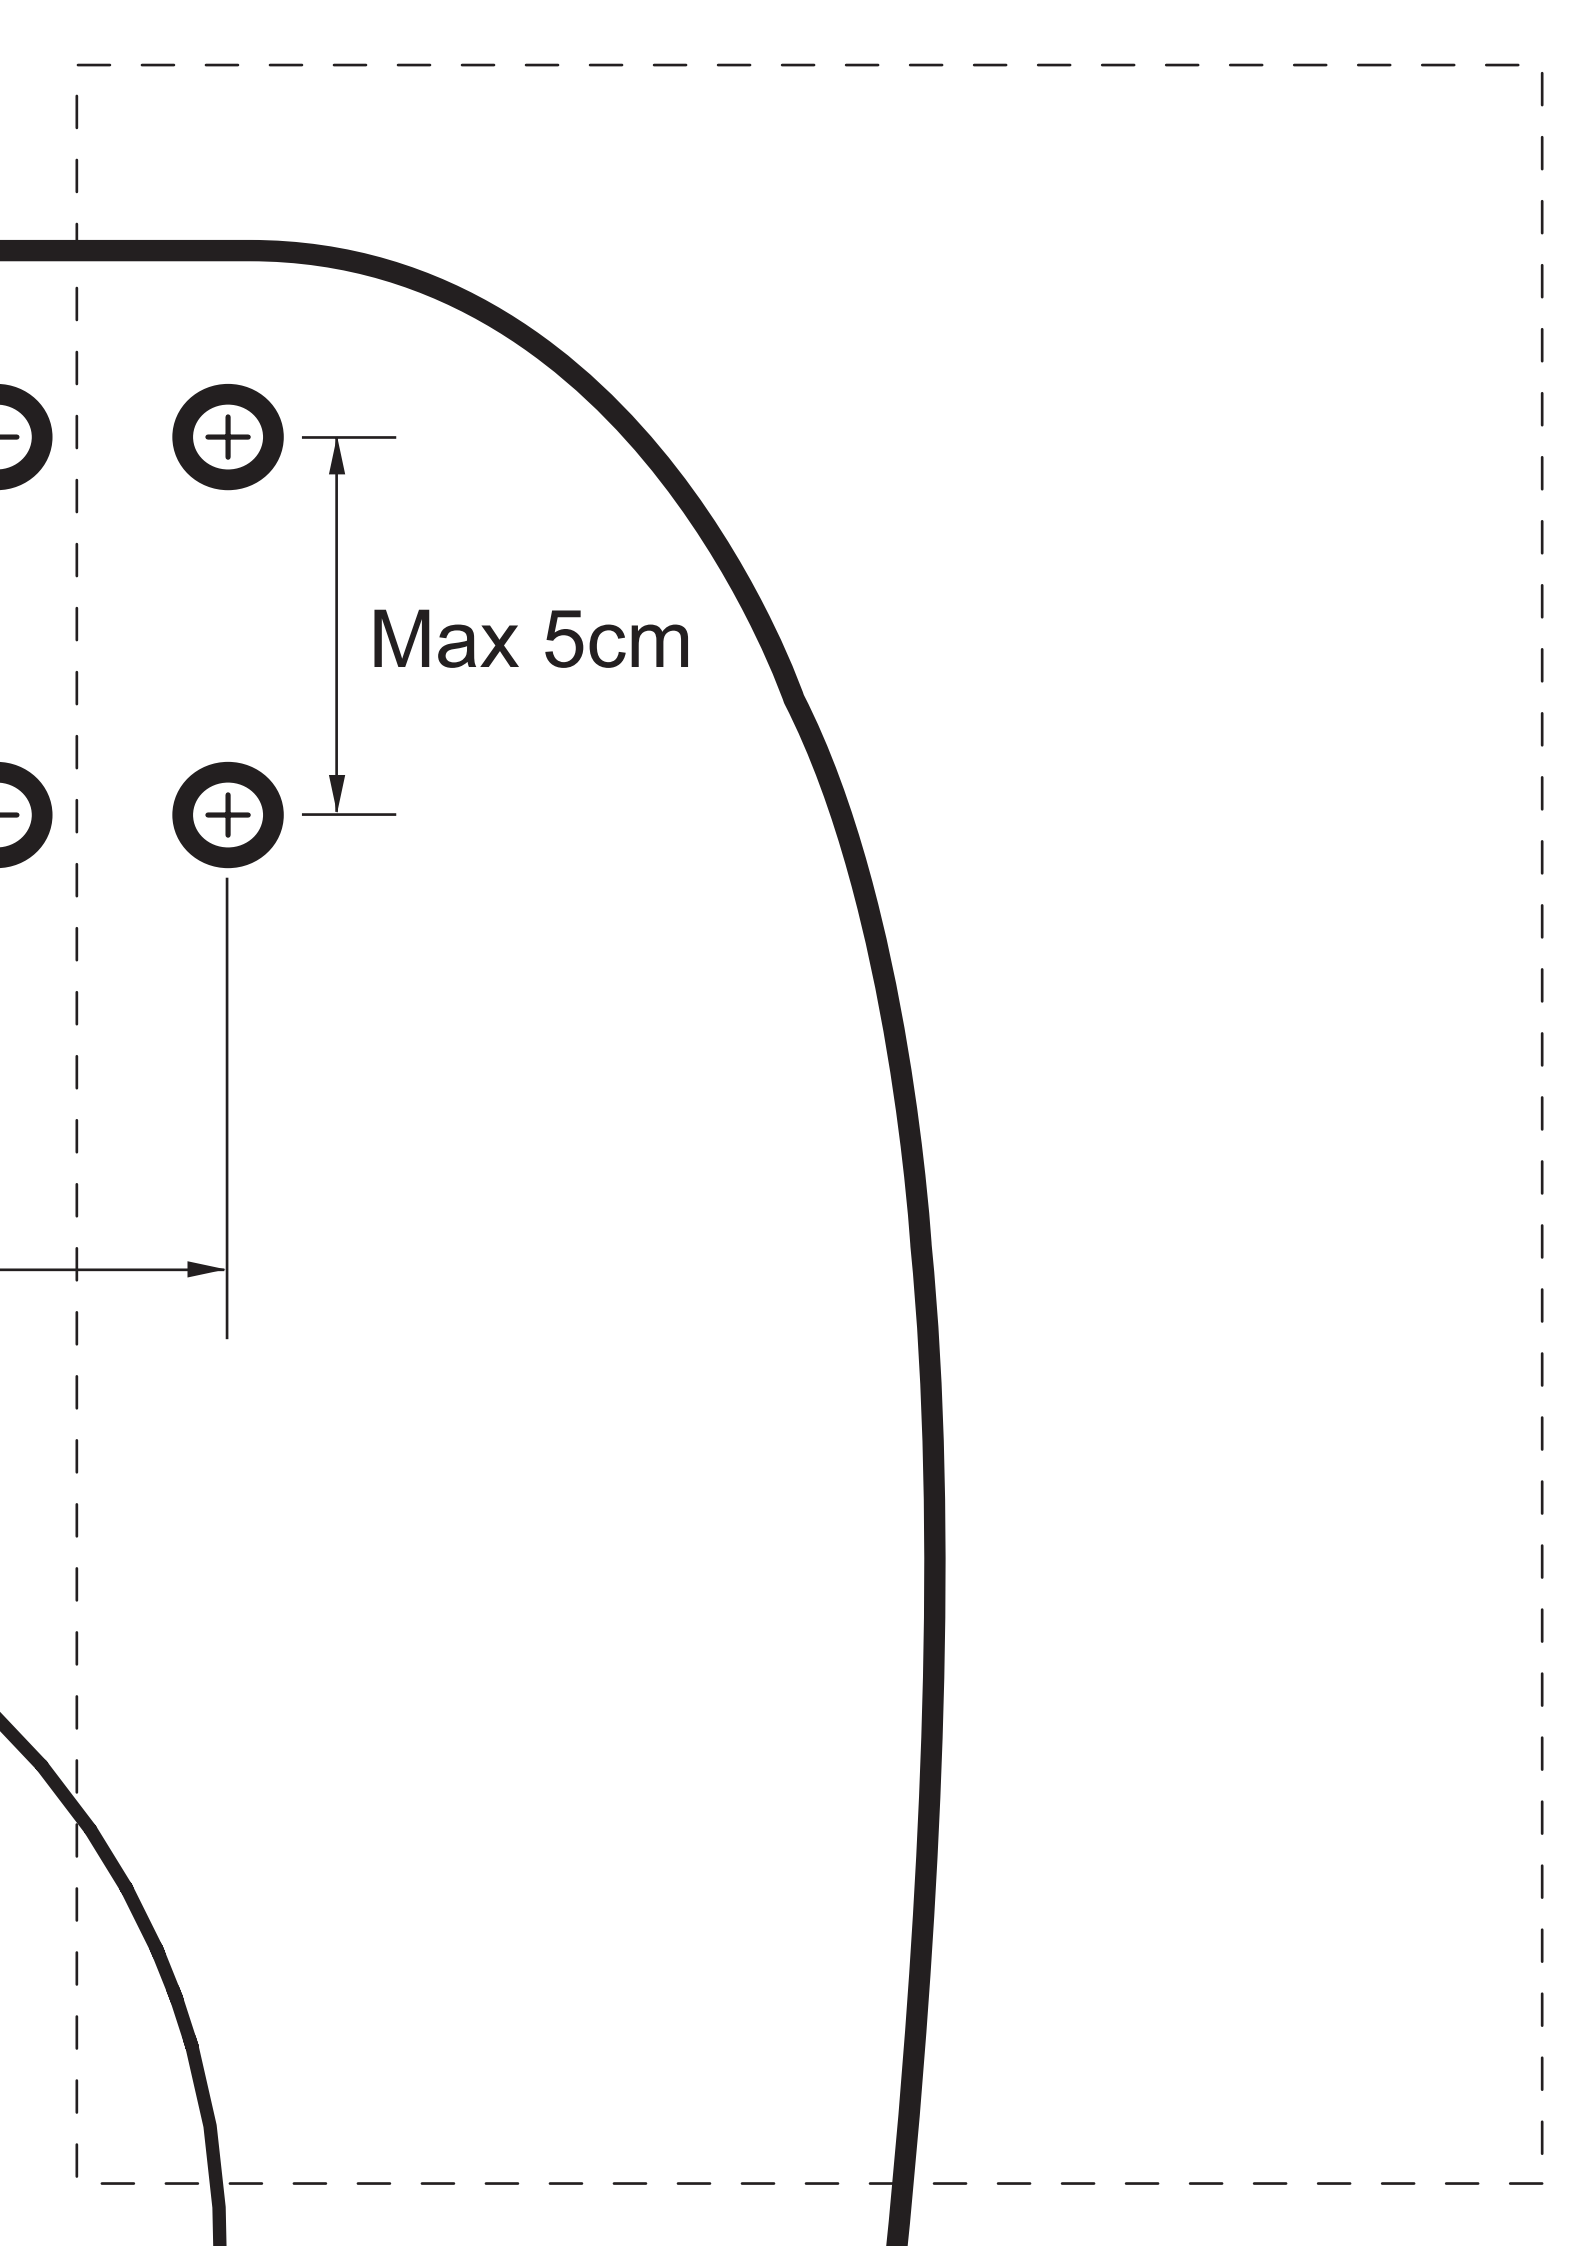

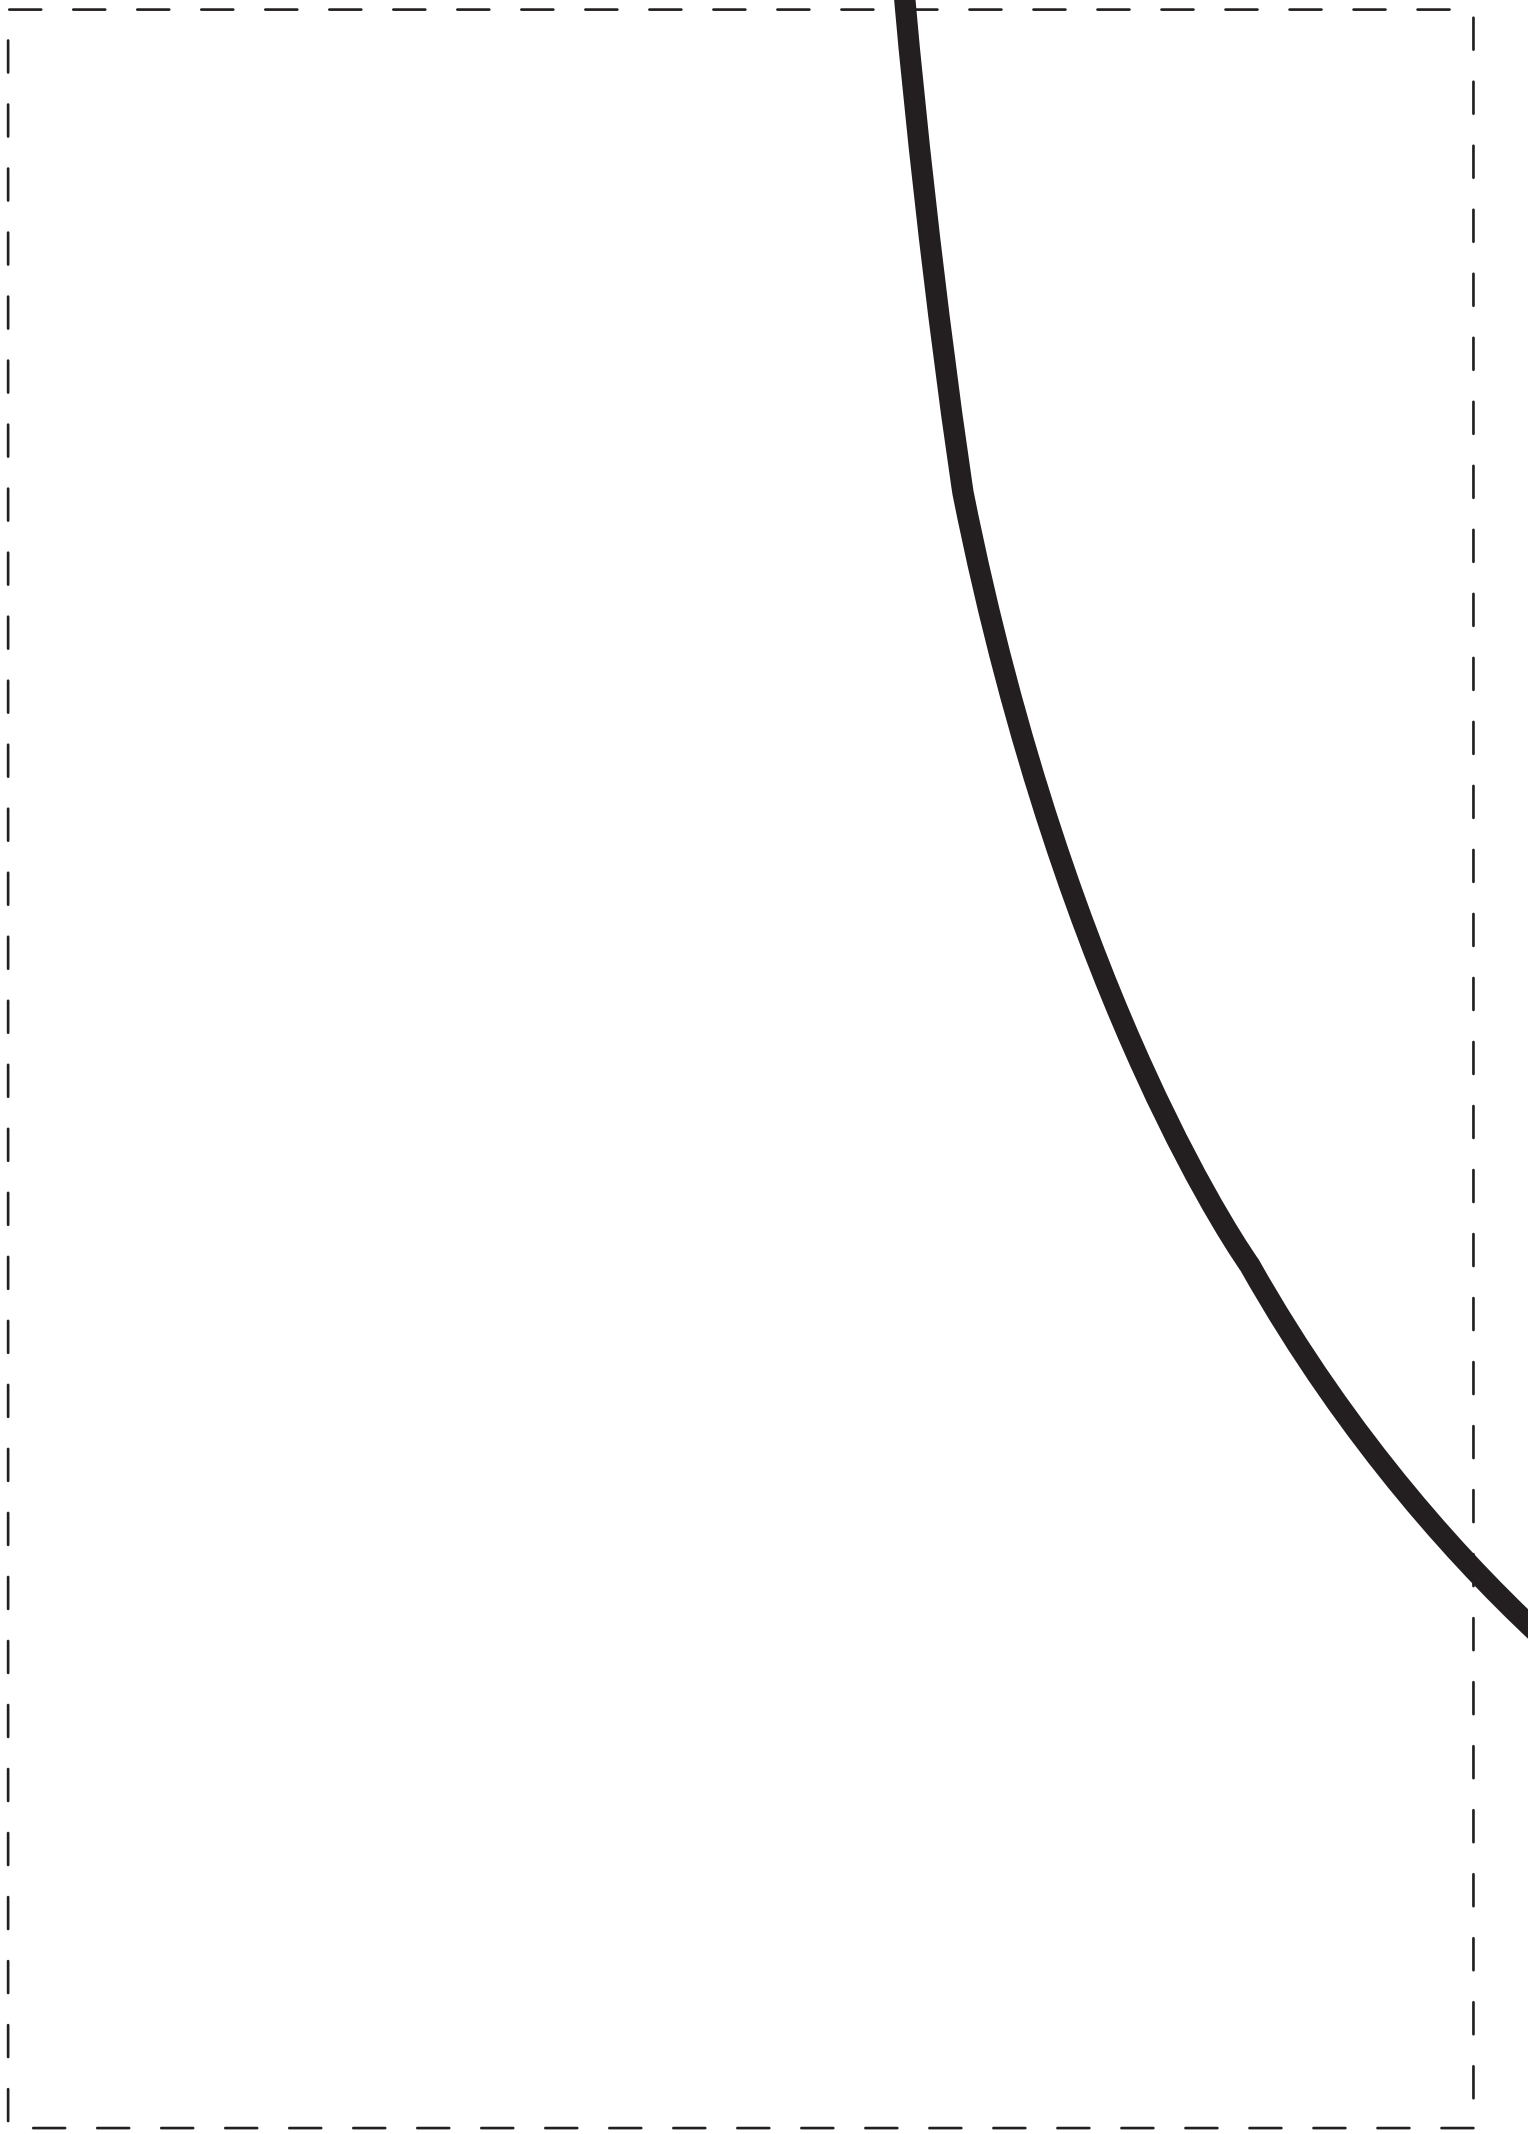

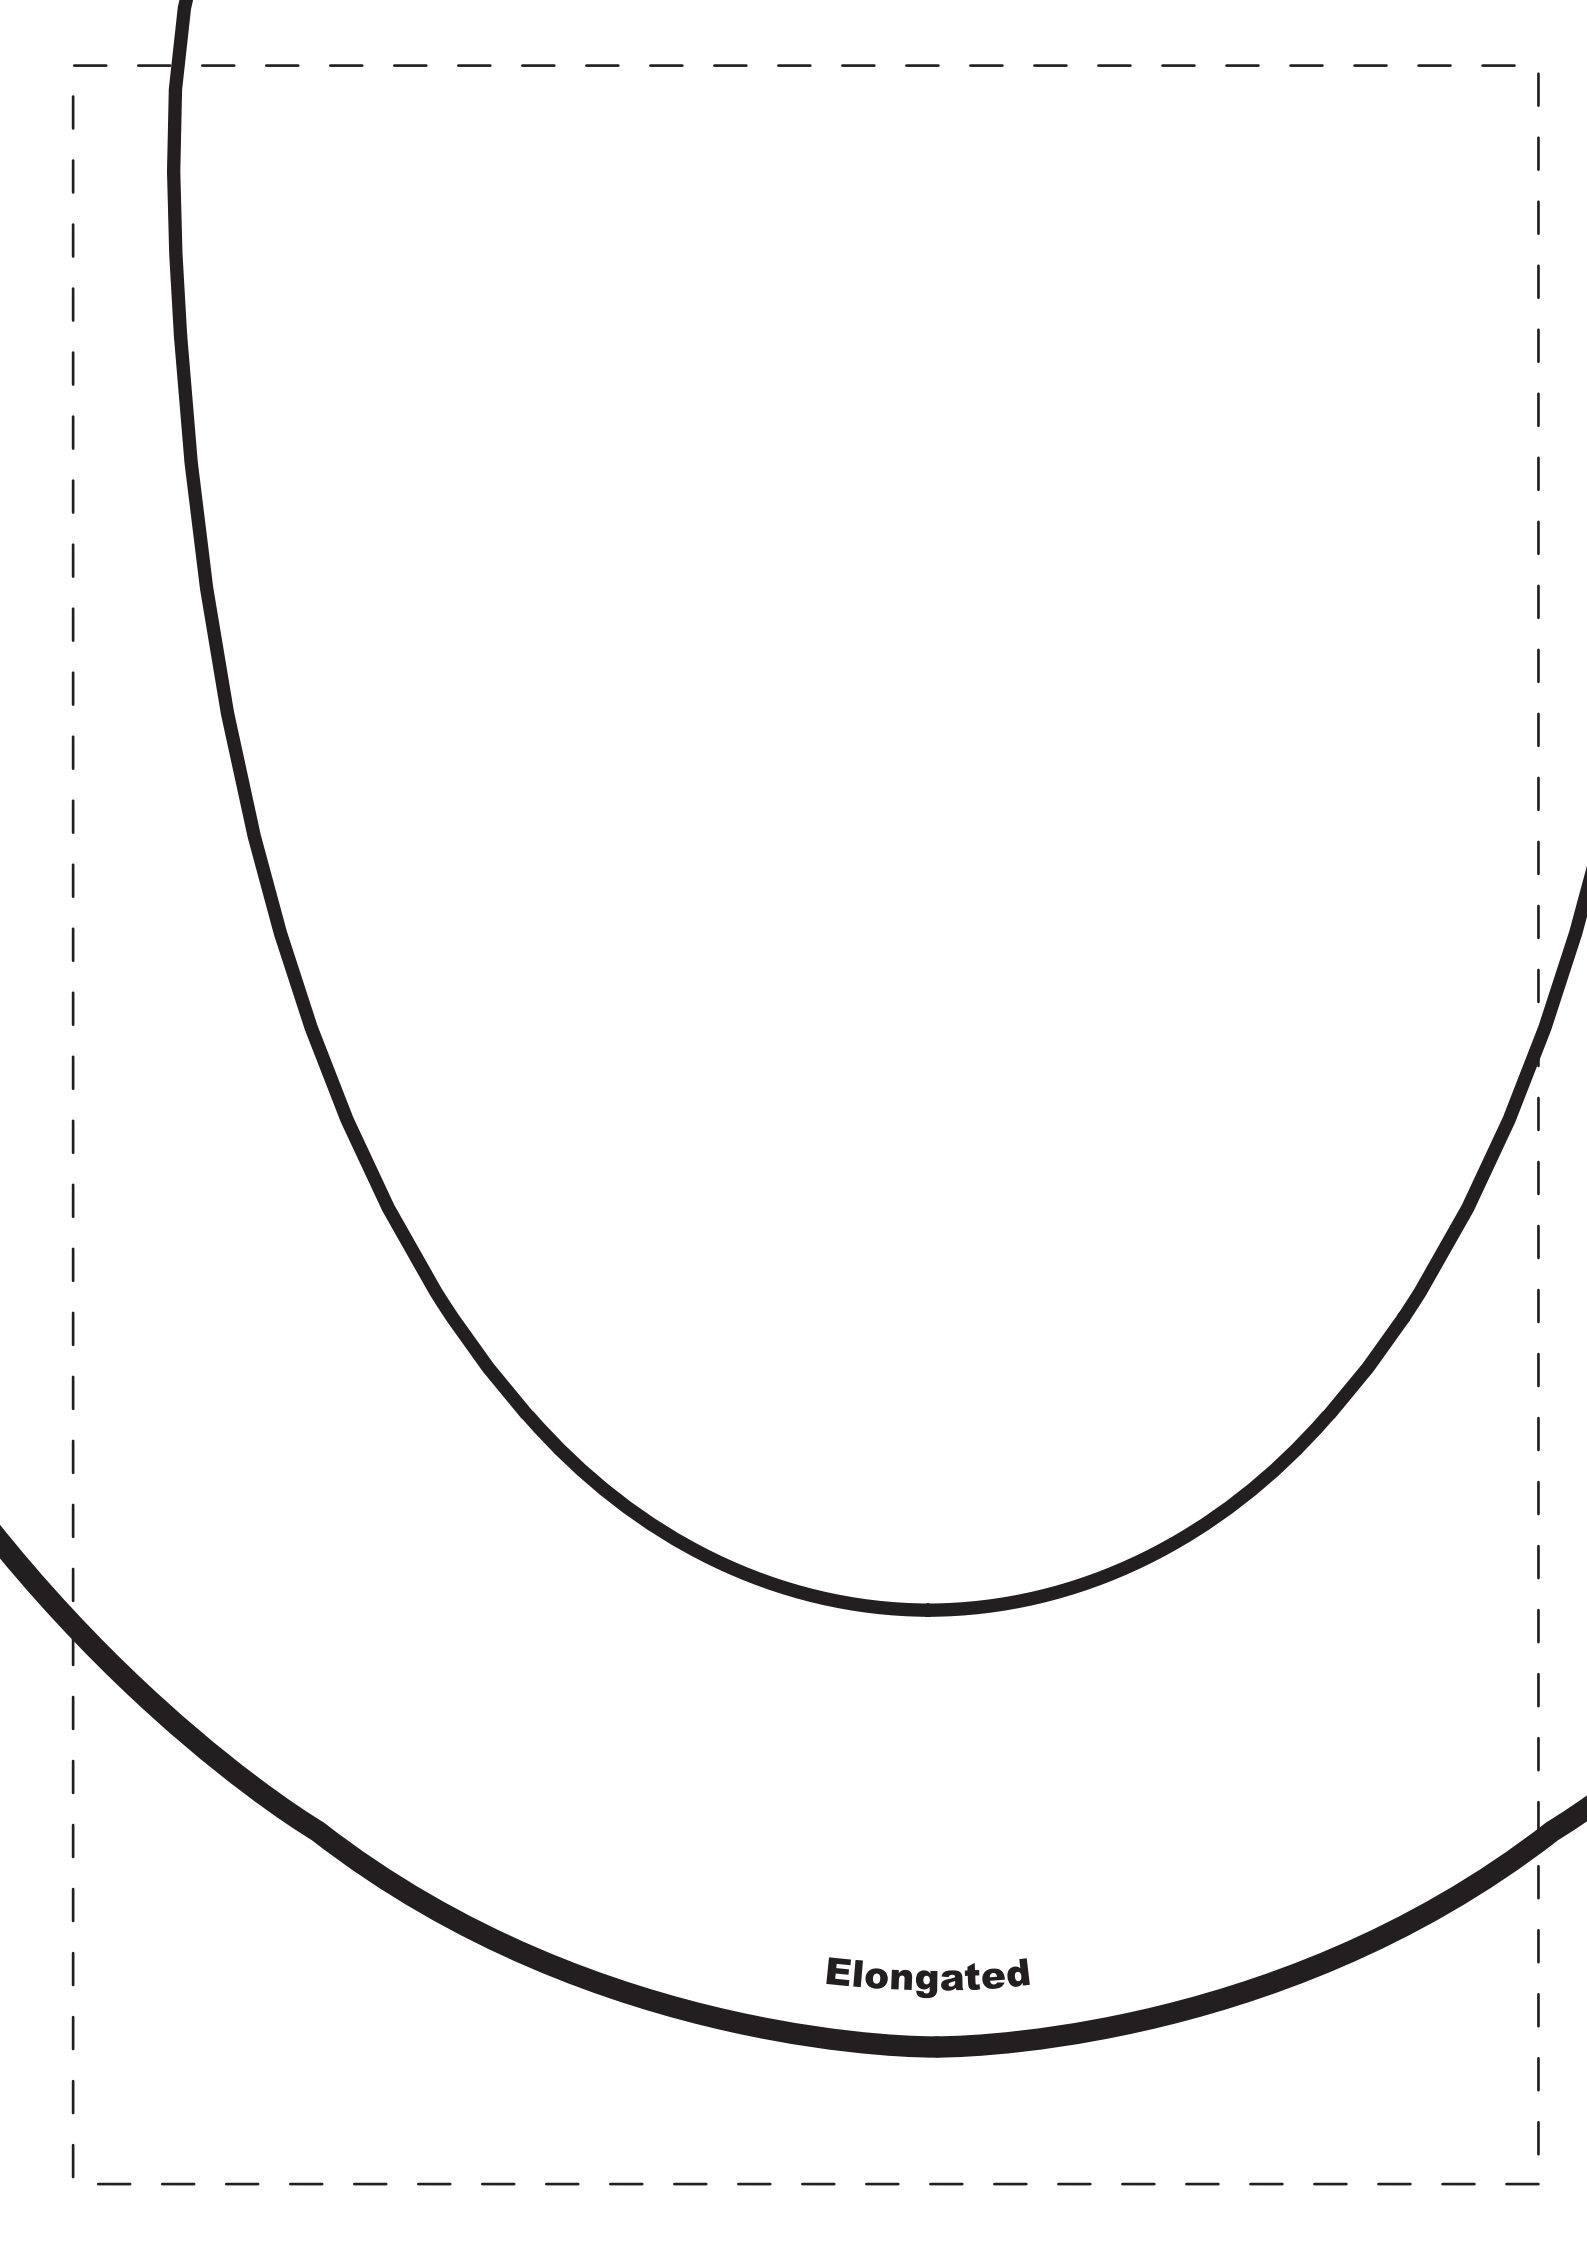

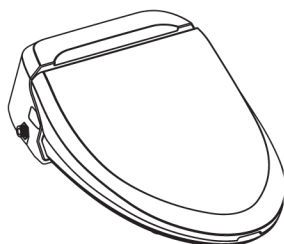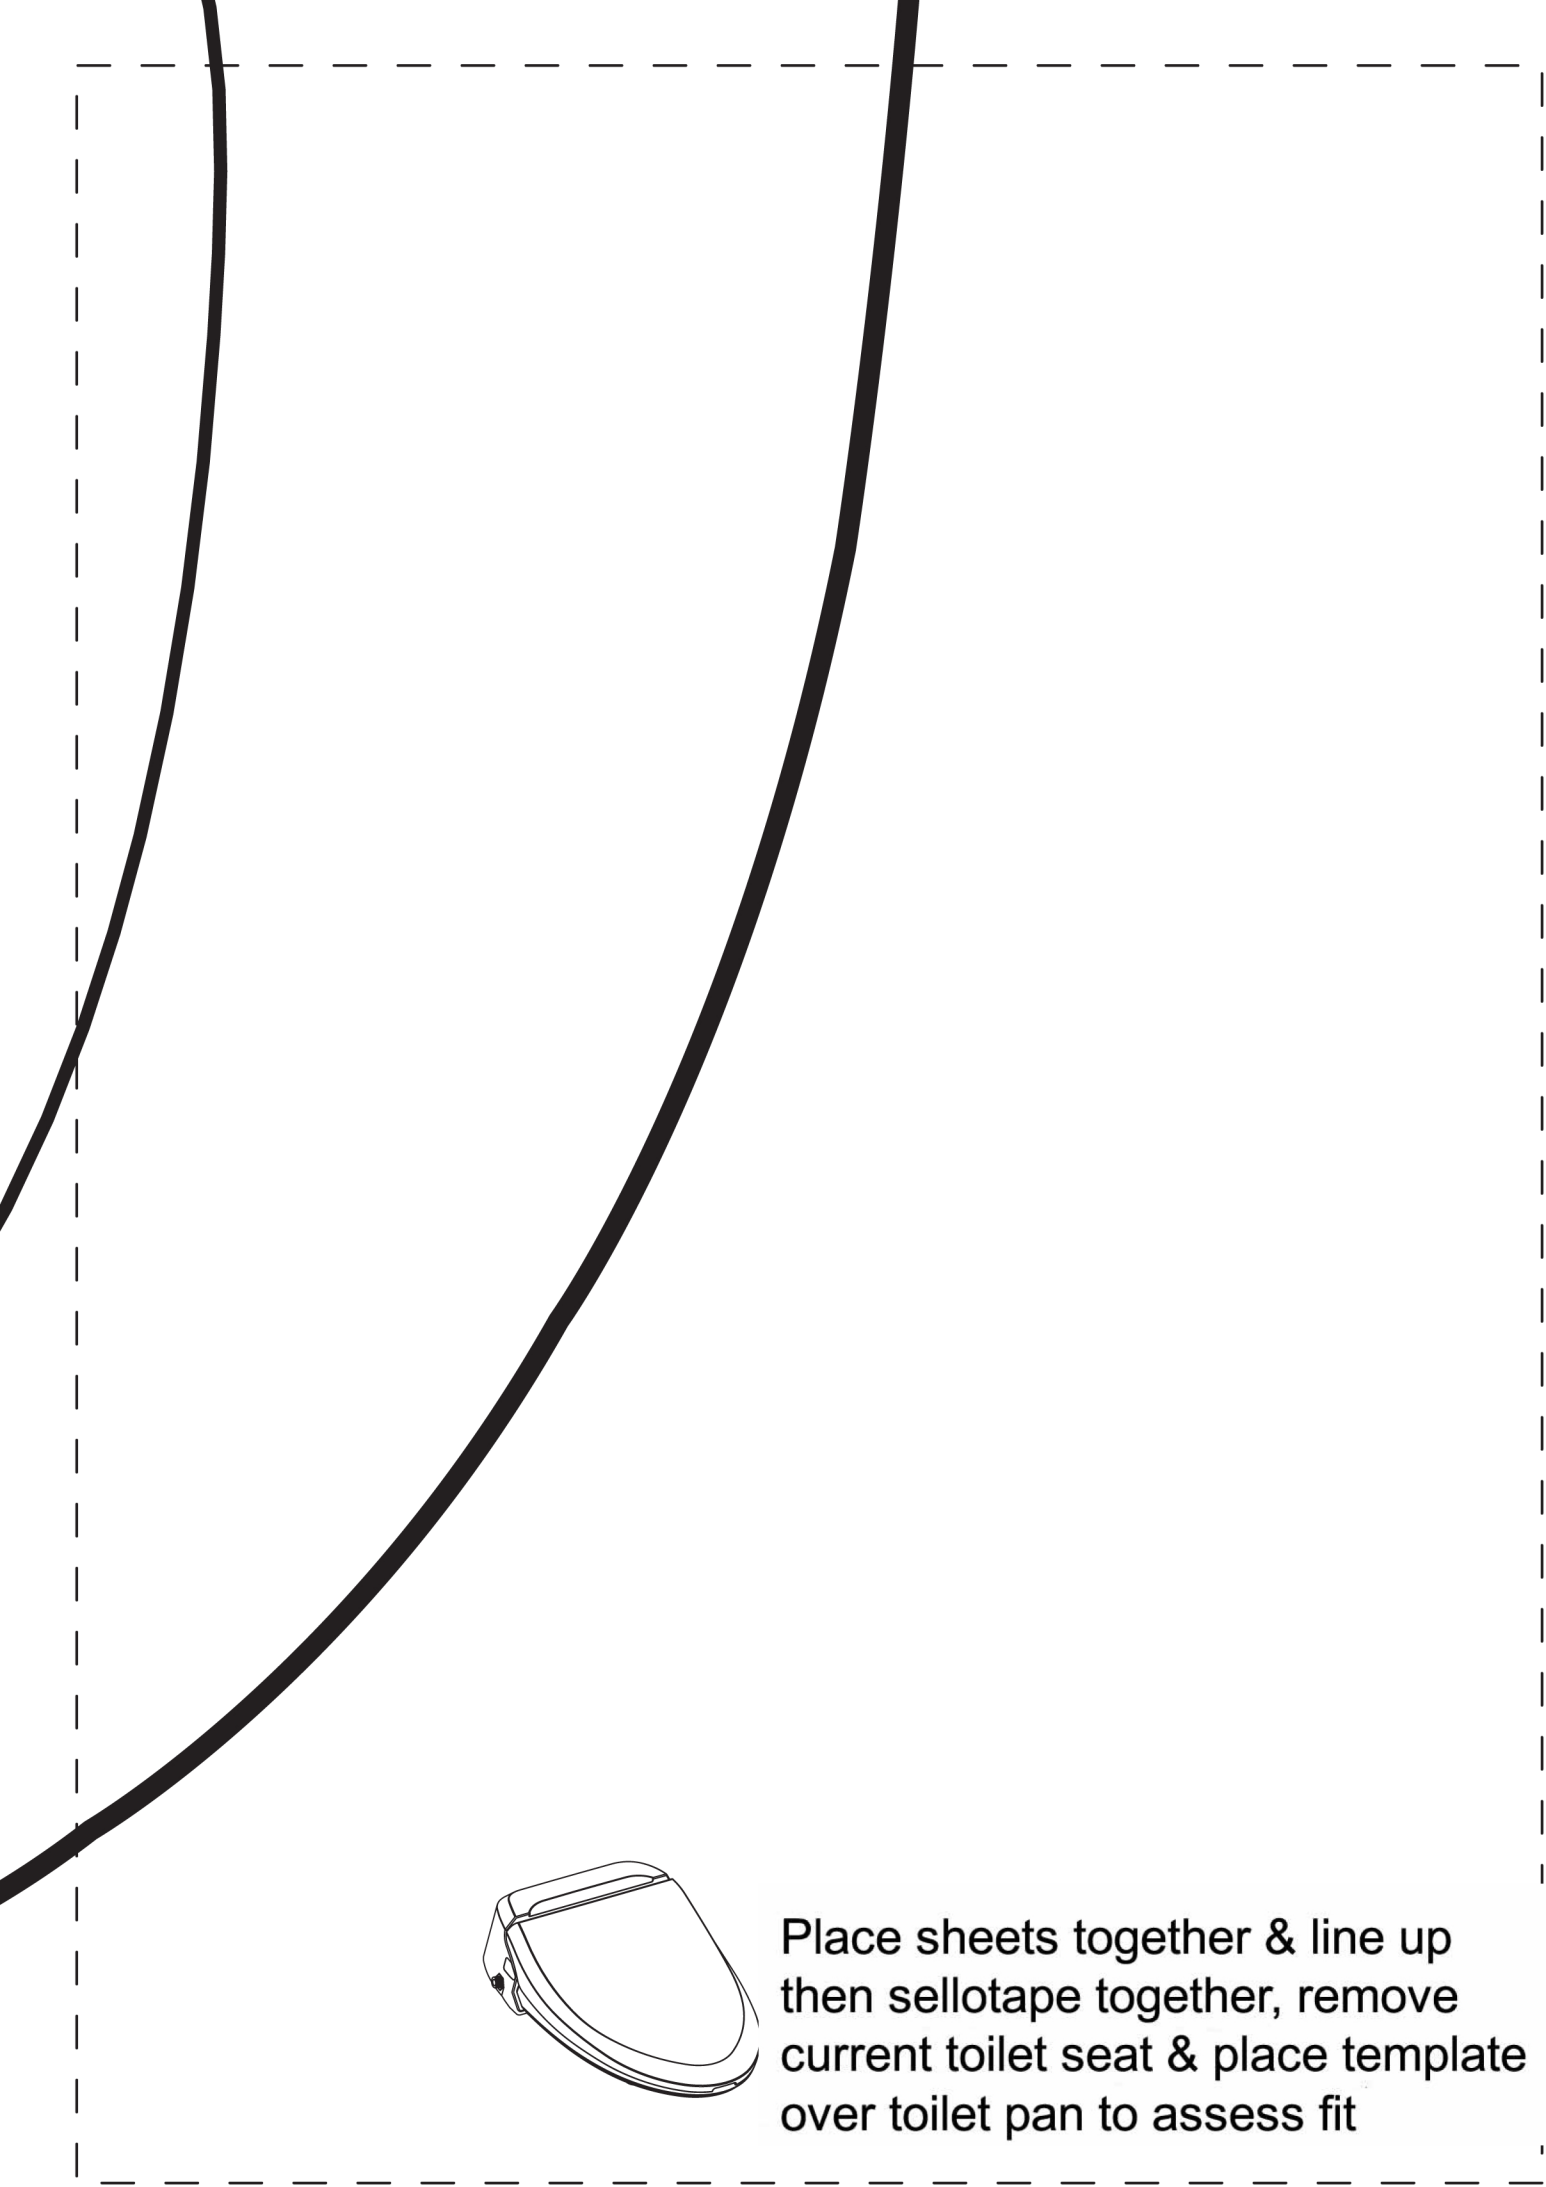

Place sheets together & line up
then sellotape together, remove
current toilet seat & place template
over toilet pan to assess fit