



Uspa 

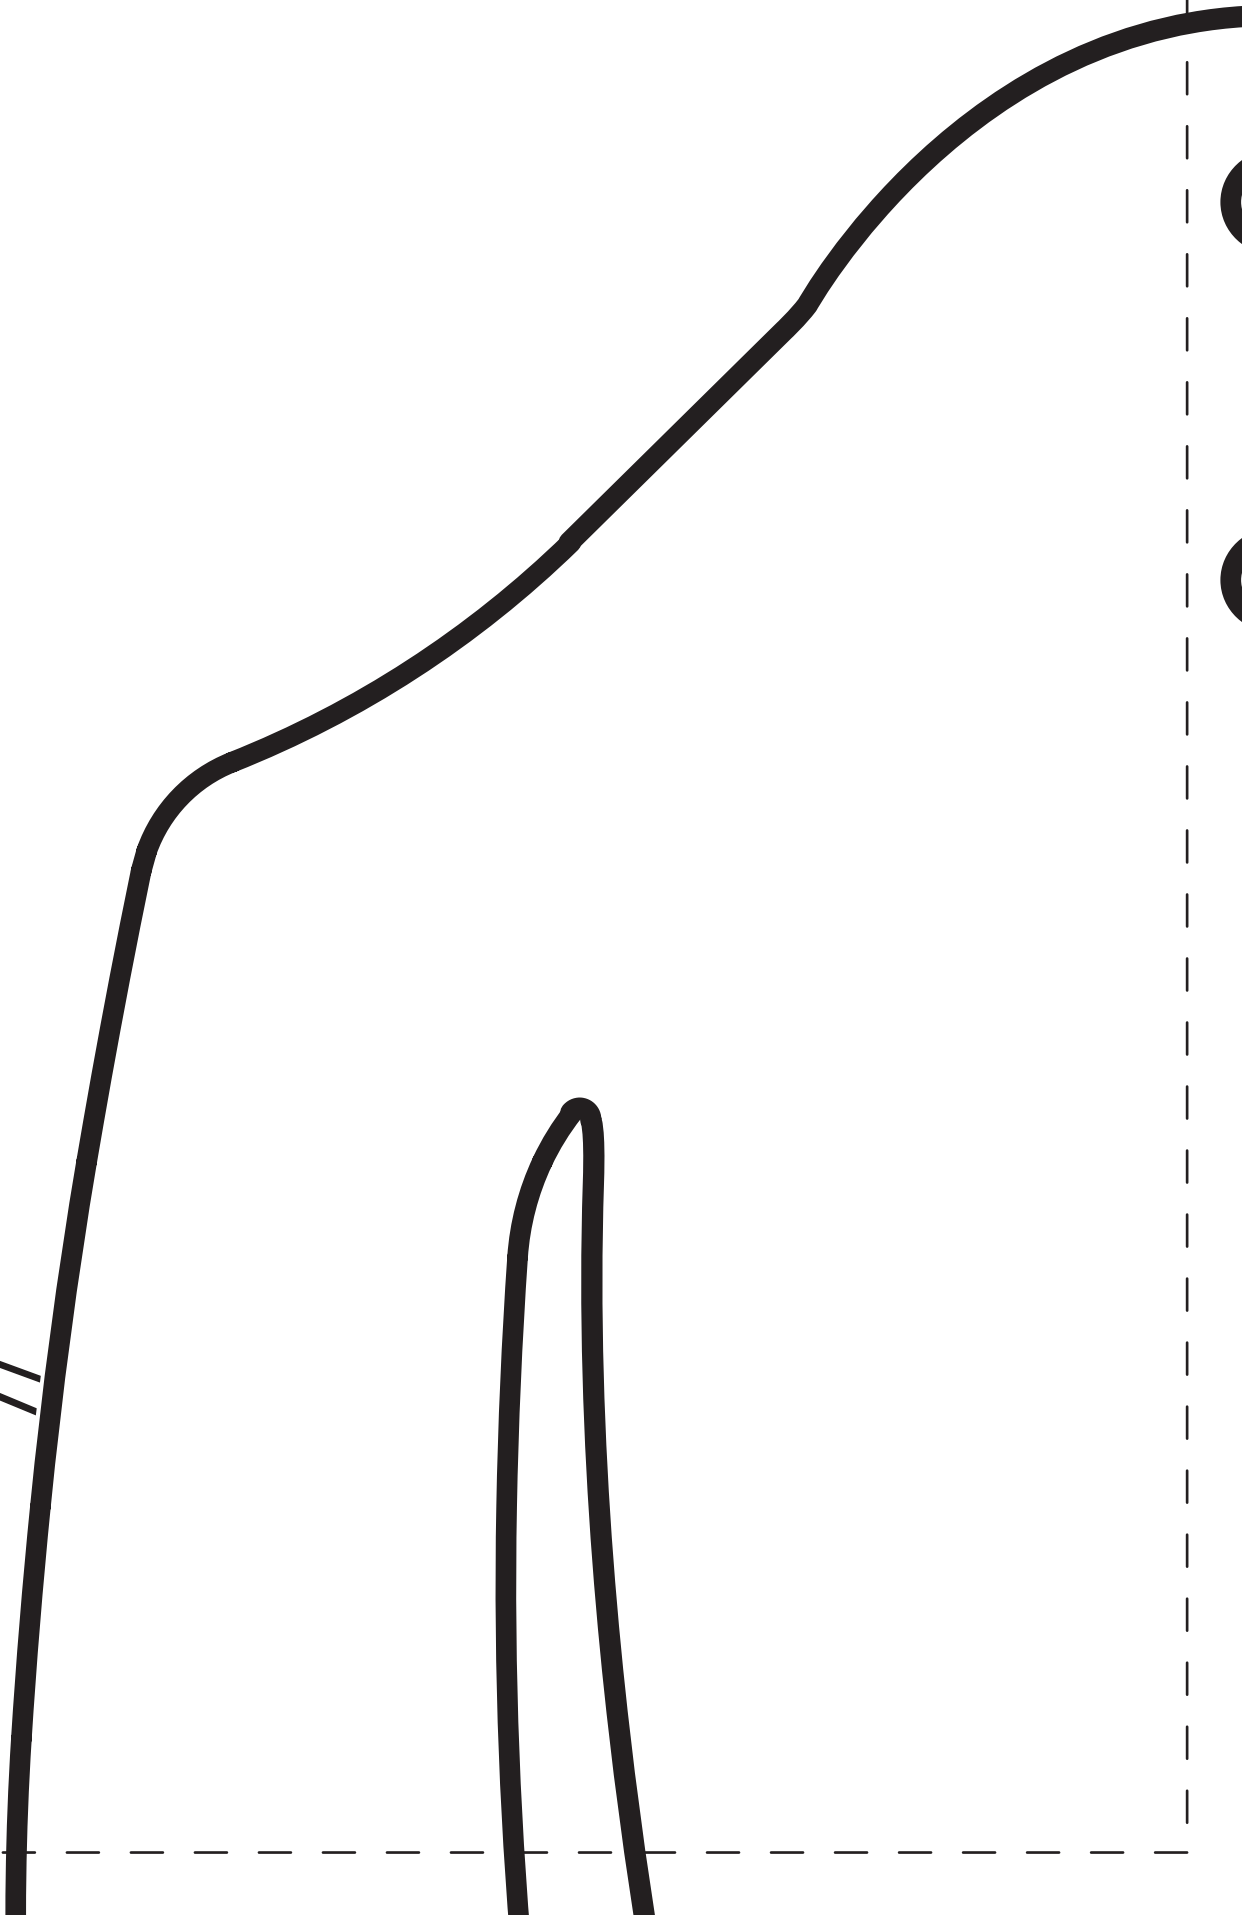




Min 14 cm


Max 20 cm

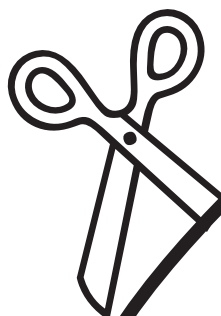


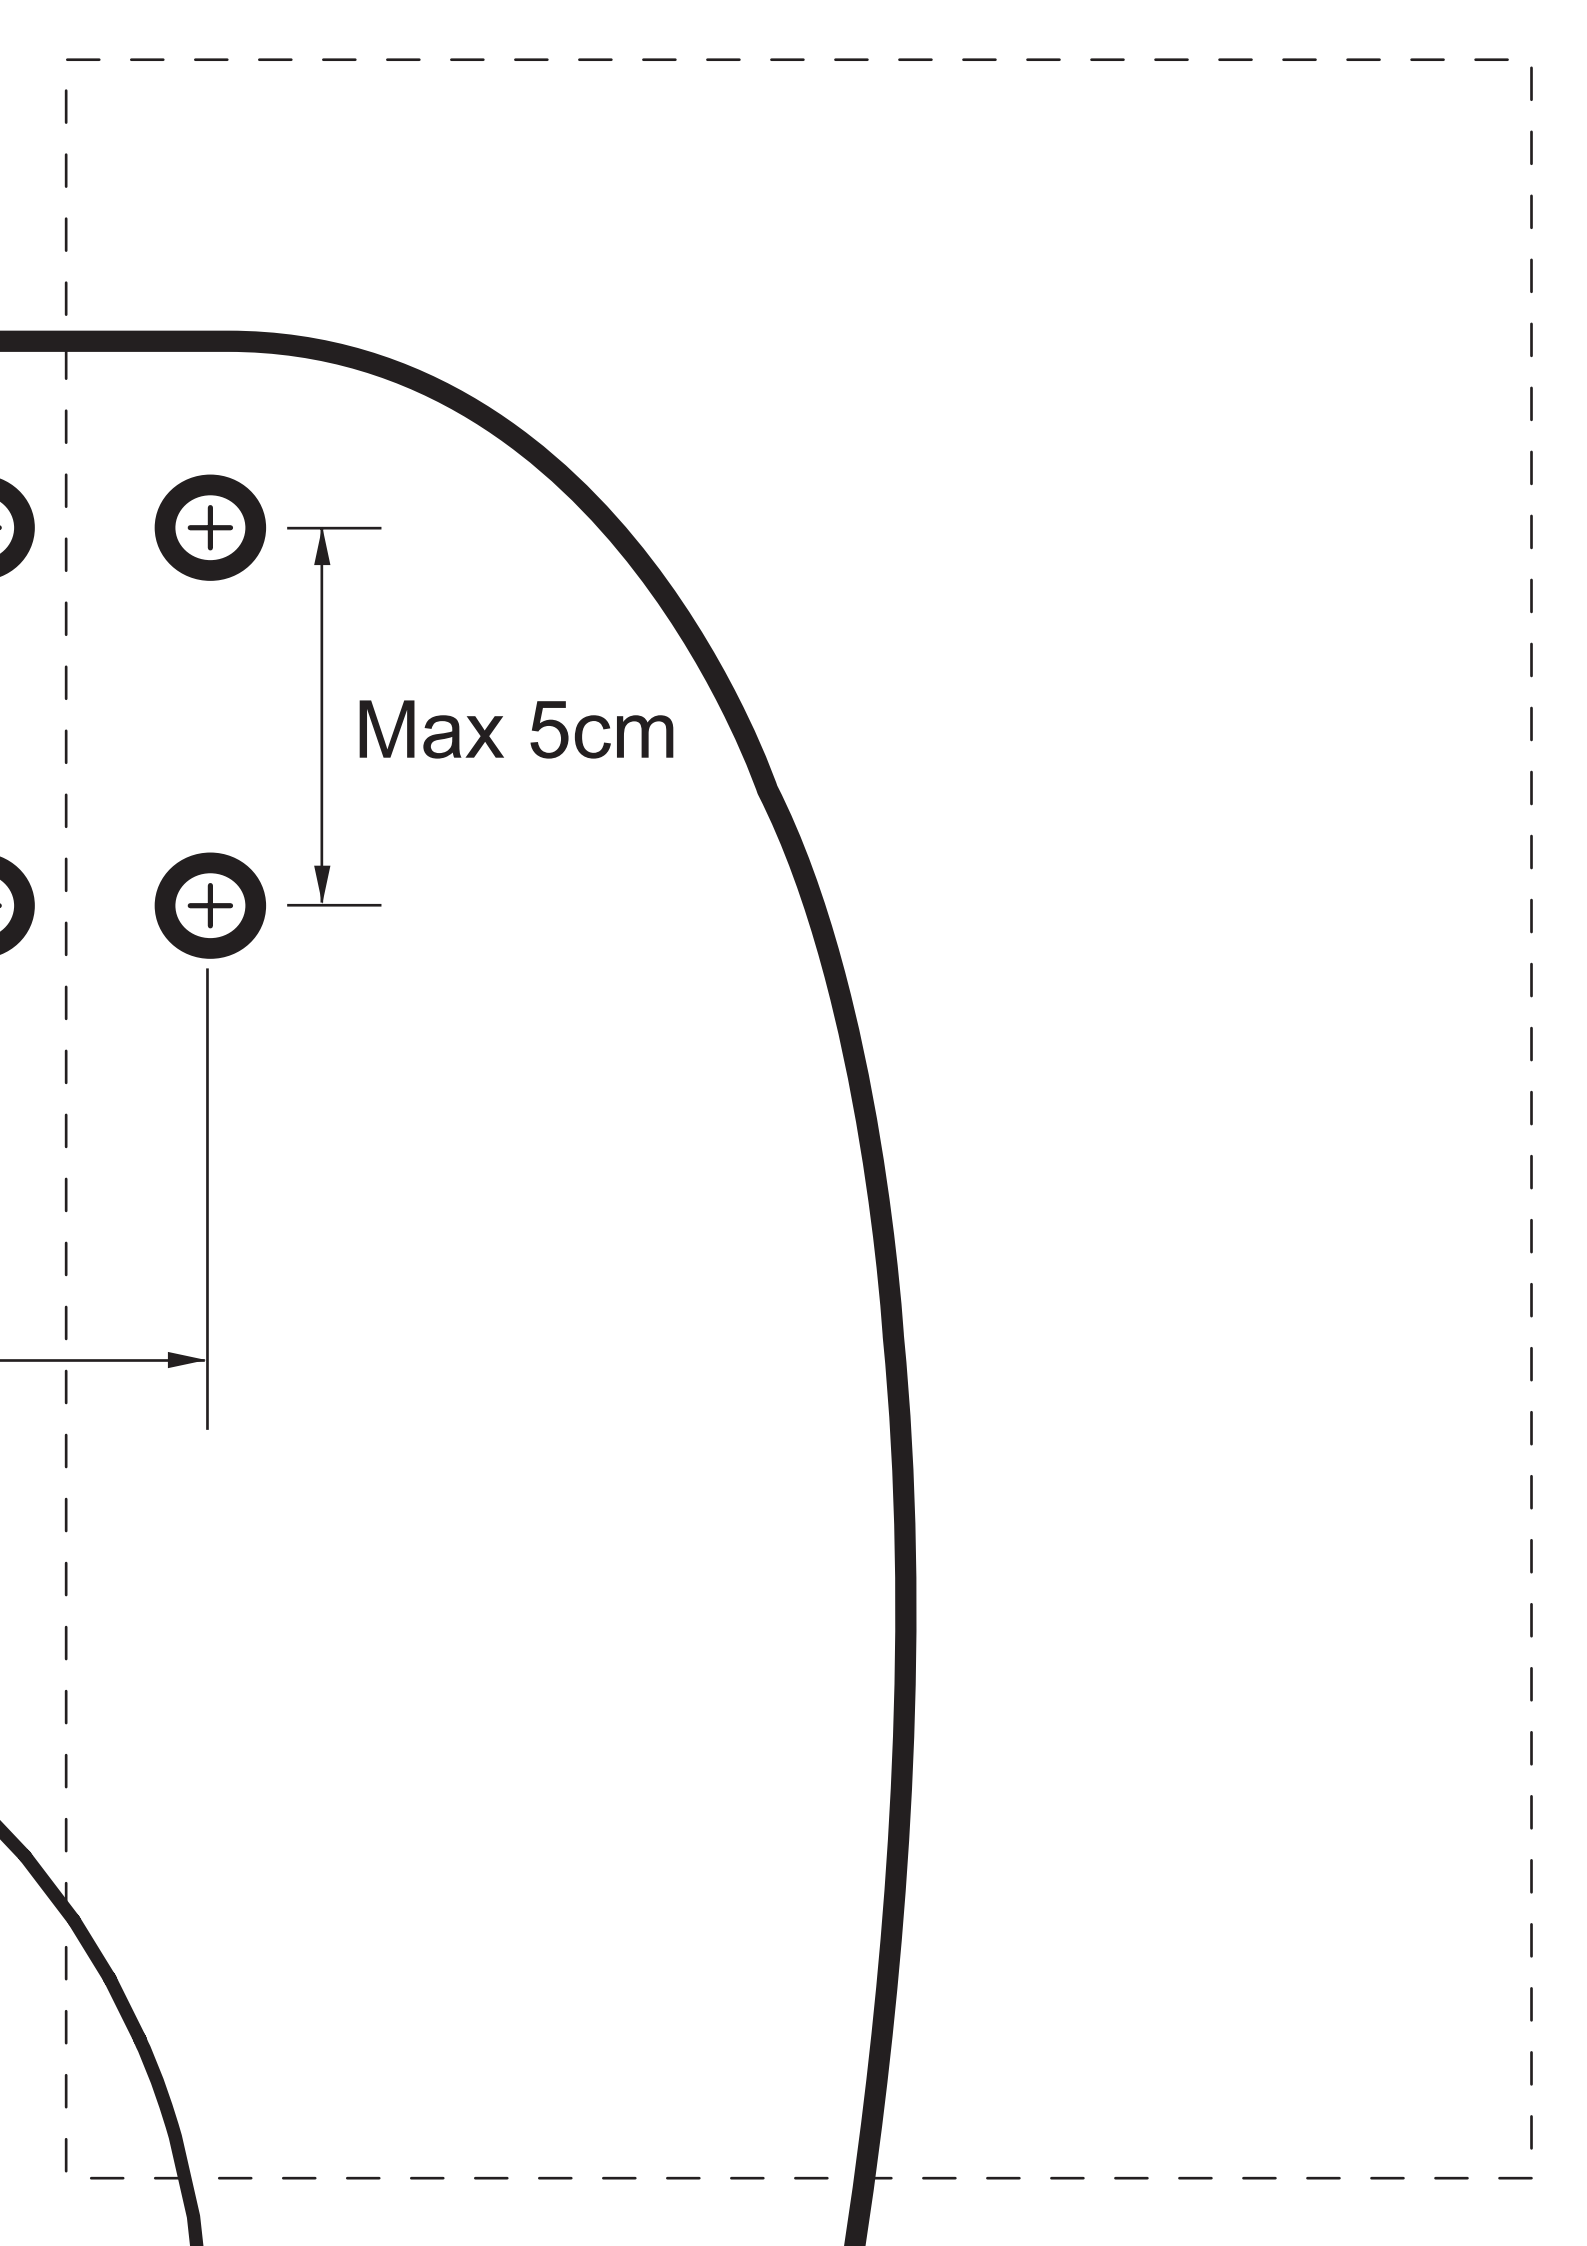


Max 5cm



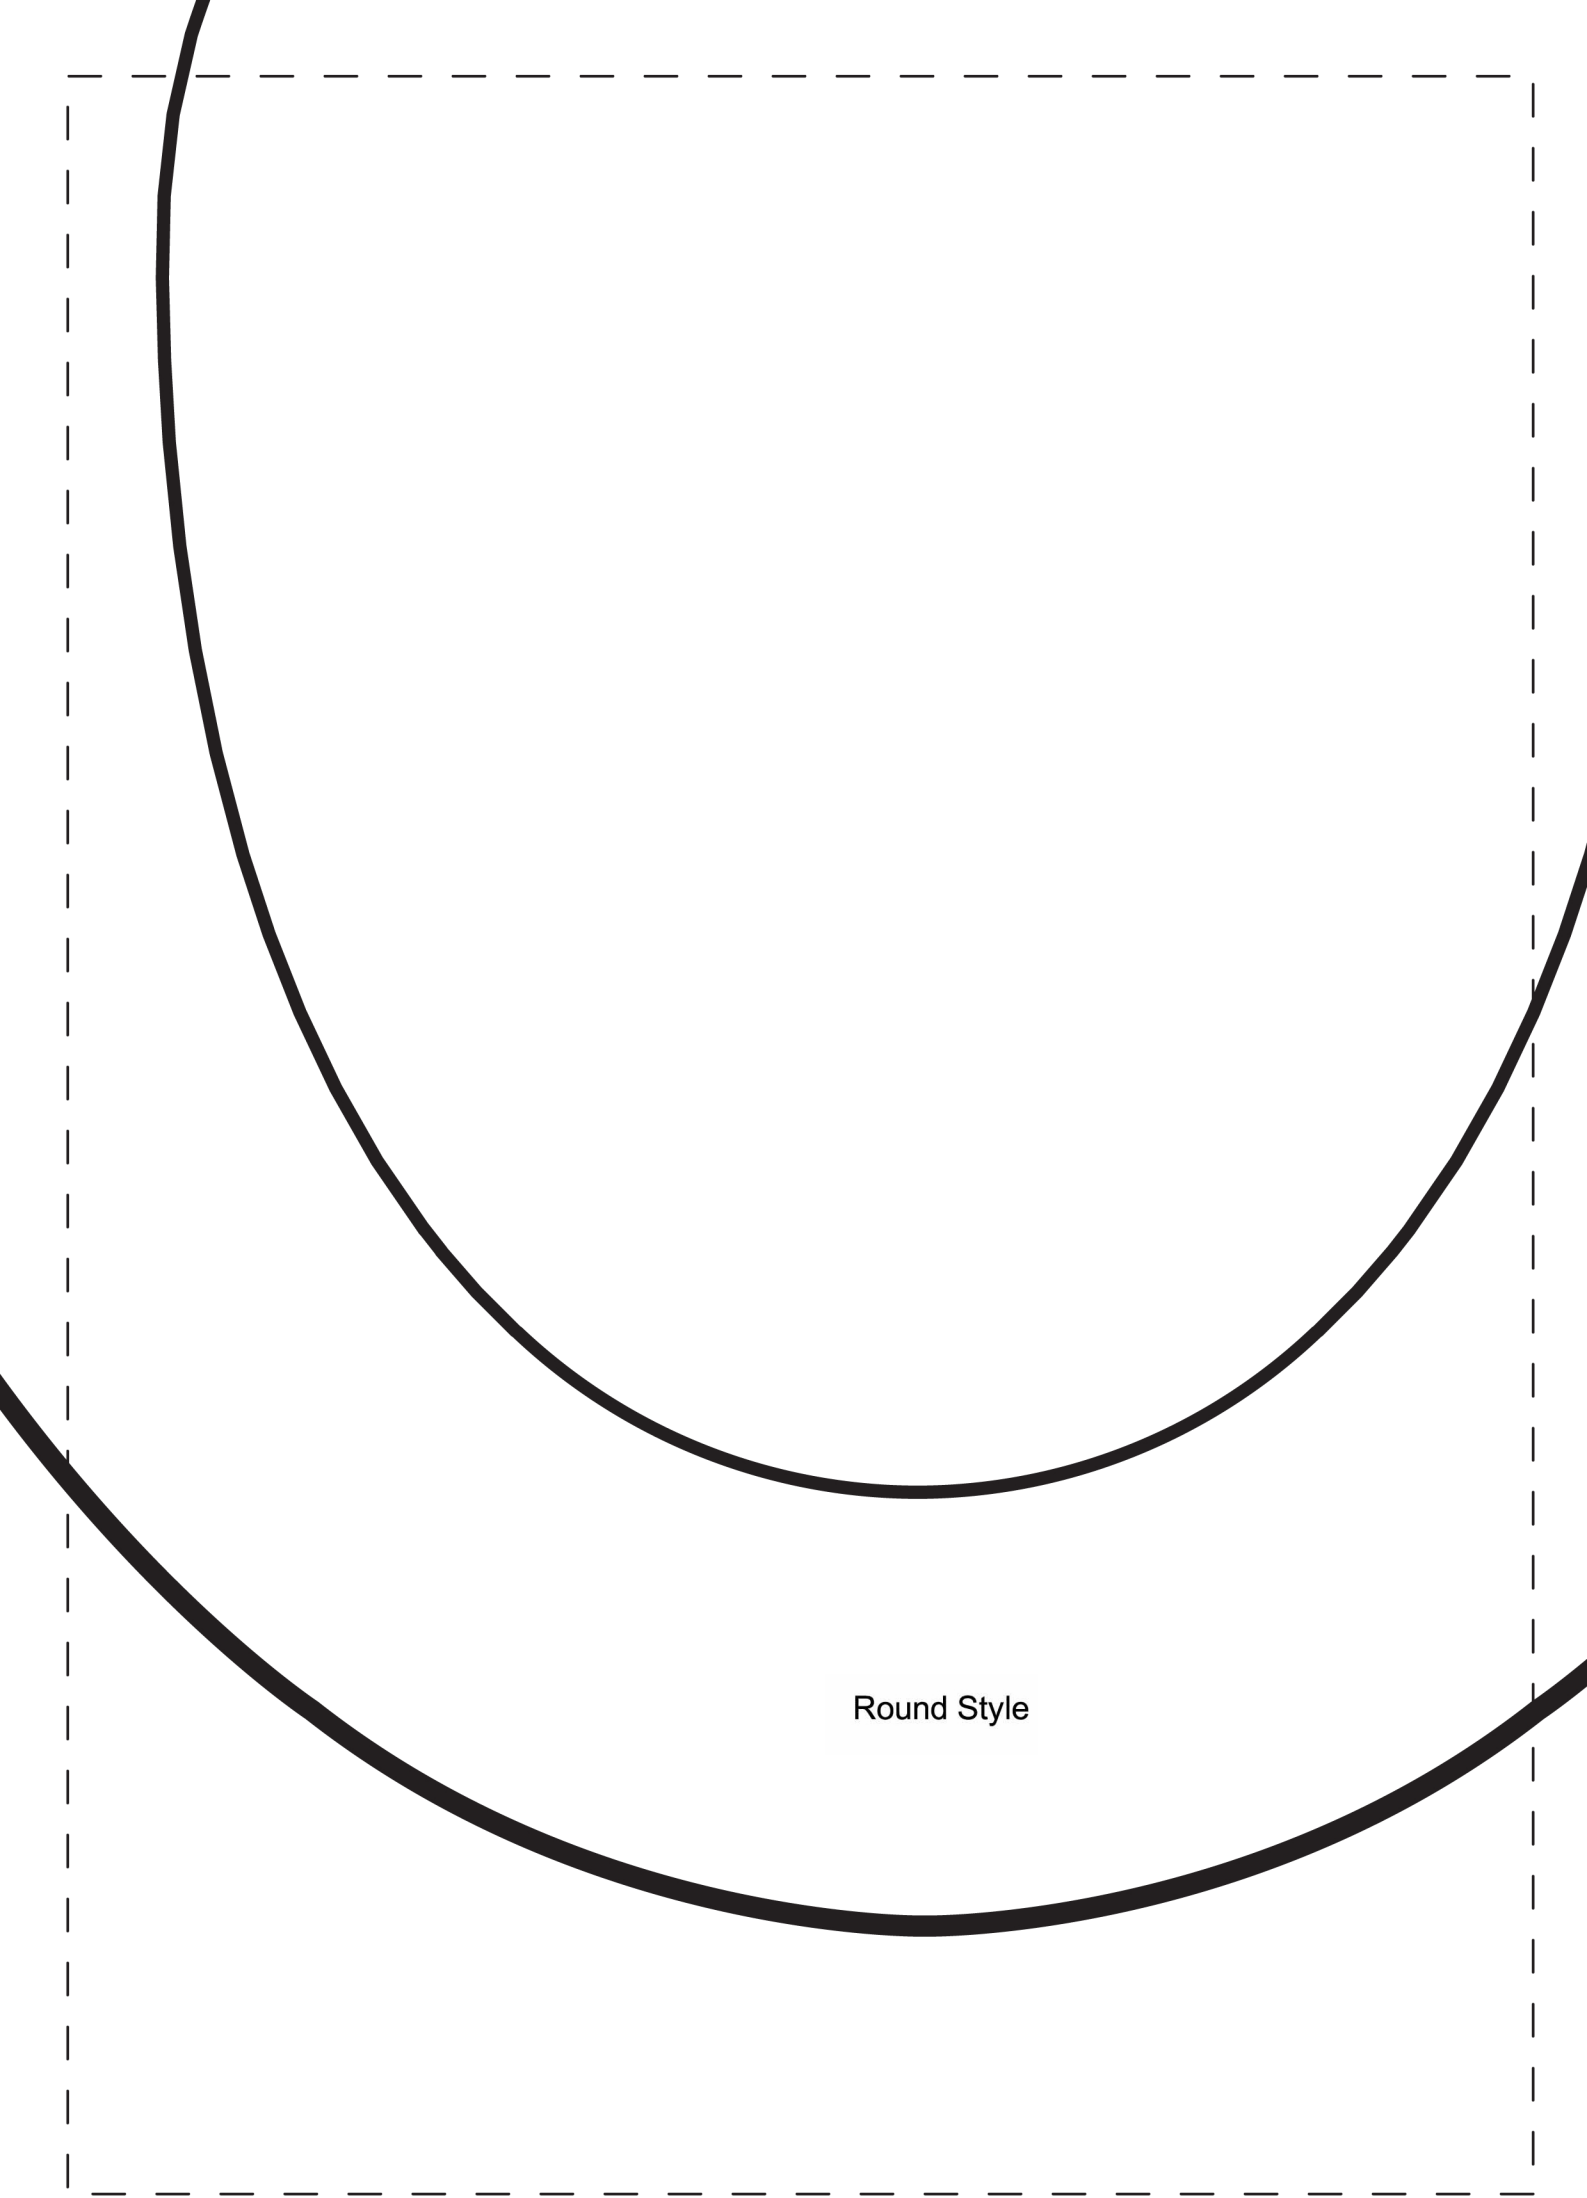

Round Style

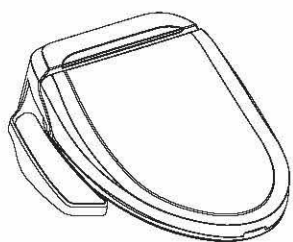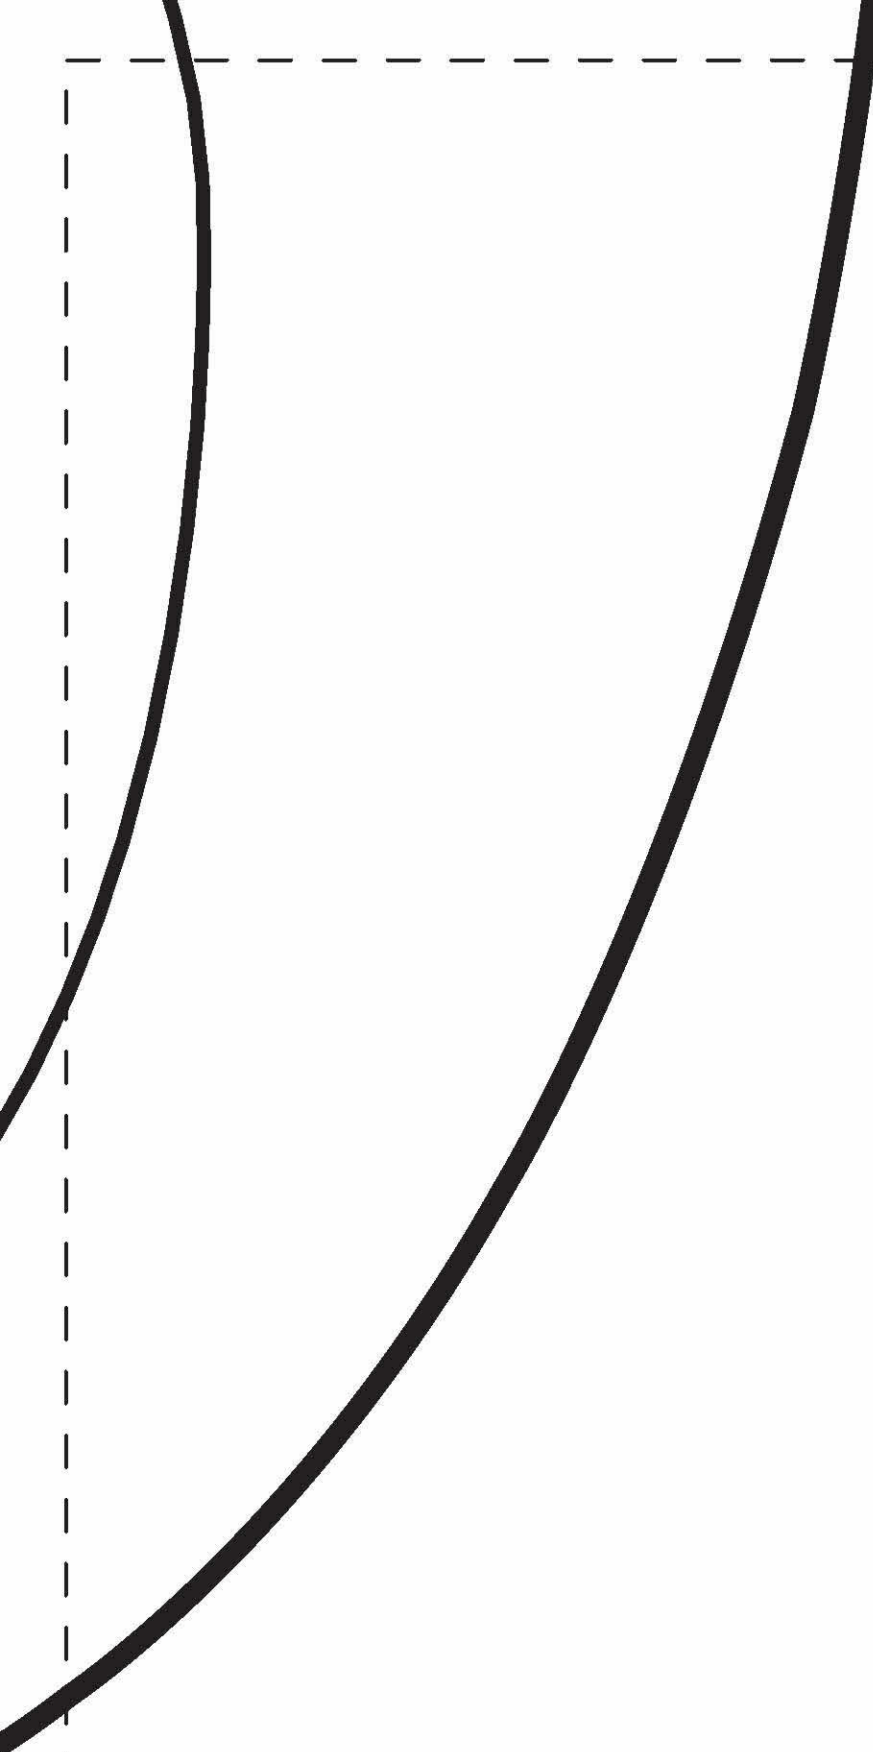

Place sheets together & line up
then sellotape together, remove
current toilet seat & place template
over toilet pan to assess fit